

1

getting started

This Quick Start Guide has been design to aid in quickly getting started with using your new projector. If you require further help, or have further questions on the detail in how to operate this unit, please refer to our web site in order to download full product documentation. You can also access FAQs, and download detailed white papers in order to get to know the more specific product features and benefits.

Packaging contents:



projector unit



remote control



cable kit (optional)




Quick Start Guide

4

adjust projector settings


Adjust zoom to set correct image size, shift to position correctly, focus for clarity, and any other desired setting, such as tilt or keystone. Note that keystone is very rarely needed when using lens shift for positioning. Adjust image level with the front feet, and tilt with the rear foot.

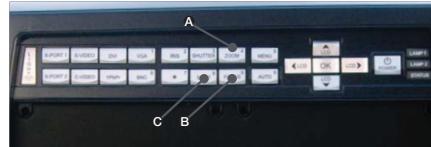

A: Zoom B: Focus C: Shift Press to activate. Adjust with arrow keys.



D: Lens shift (operated from back)

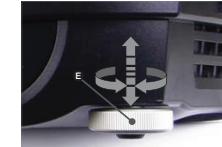

E: Adjustable feet for levelling.

2

mount projection lens, get to know the connector panel

Carefully mount the projection lens. Remove protection end caps on lens and bayonet mount, then insert, and turn clockwise until it stops and a click sounds. The connector panel at the back features a wide range of connectors for all sorts of source connections. Decide which one(s) that meet(s) your requirement(s).



3

connect sources, connect power, power on

Make sure the projector is switched off, and not connected to power when connecting to sources. Connect video and computer sources, then insert the power cable. Power up sources, including computers and video playback devices. Power up the projector by pressing the power key (P). A steady, bright indicator light will indicate it is in operation. CAUTION! Connecting sources to a powered projector may result in product failure.



6

power off and allow to cool down

To power off, press the power (P) key once, and confirm by pressing again. Allow to cool down until all fans have stopped (a minimum of 30 seconds), and steady amber indicator lights indicate the projector has been safely turned off. Disconnect any cables, sources and power cables before uninstalling the projector.

>30 s



