



IQ RS232

SERIAL COMMUNICATION USER'S MANUAL

Product revision

Software version: 1.30

Barco nv Intelligent Displays

Noordlaan 5, 8520 Kuurne

Phone: +32 56.36.82.11

Fax: +32 56.35.86.51

E-mail: presentations.bid@barco.com

Visit us at the web: www.barco.com

Federal Communication Commission (FCC Statement)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference.

Changes

Barco provides this manual "as is" without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of BARCO.

1. SERIAL COMMUNICATIONS BASICS

Overview

- Communication Protocol
- Data words
- Communication settings
- Hardware
- Syntax
- Serial comms commands

1.1 Communication Protocol

Communication protocol summary

Like every communication method the serial communication uses a particular protocol (ANSI) which must be respected in order to allow communication to take place, following table gives a summary of the predefined communication terms.

Start byte	\xfe
Projector address	
Command byte(s)	
Data bytes ¹	
Checksum byte	
Stop byte	\xff



ANSI

American National standards Institute

Start byte

The "Start byte" informs the projector (in case of transmission) or the computer (in case of reception) that a new data transfer will take place

Projector address

The "projector address" defines the address of the computer the projector wants to talk to (in case of transmission) or the address of the projector that answers (in case of reception).



The maximum number of projectors that can be addressed by one computer is 256.

Command byte(s)

There is at least one command byte to define the action to be performed. Commands that are not often used or complex commands can take more than one byte. All command bytes that are sent by the computer to get information out of the projector are repeated in the answer-data-transfer of the projector.

Data bytes (optional)

Whether the command bytes are followed by one or more data bytes depends on the contents of the command bytes.

Data which contains more than one byte is called a word and can also be signed or unsigned. see Data words, page 4



Some commands do not require a data field(s)

Checksum byte

The "Checksum byte" is used to detect errors during transmission or reception

Checksum byte = (projectoraddress + command bytes + Data bytes) Modulo \x100

Stop byte

The "Stop byte" informs the projector (in case of transmission) or the computer (in case of reception) that the data transfer is complete and that the interpretation of the command and data bytes can start.

Acknowledge

If the communication link and if the sent commands can be interpreted by the projector an "ACK" command is sent back. In case the commands cannot be interpreted a "NACK" command is sent back.

¹. optional

Note



Any command byte, data byte or checksum byte that equals \x80, \xfe, \xff has to be converted !

1. Transmission
 - instead of \x80, send \x80 followed by \x00
 - instead of \xfe, send \x80 followed by \x7e
 - instead of \xff, send \x80 followed by \x7f
2. Reception
 - replace \x80 followed by \x00 with \x80
 - replace \x80 followed by \x7e with \xfe
 - replace \x80 followed by \x7f with \xff

1.2 Data words



msb

The **most significant byte**, is the byte with the greatest weight (value).



lsb

The **less significant byte**, is the byte with the smallest weight (value).

Description

A word contains more than one byte, the first byte is the msb, the last byte is the lsb.

Examples of data words

- The projector runtime parameter is described using an unsigned double word where 2 bytes (msb ...lsb) represent the value of the runtime in seconds.see Projector's runtime, Read, page 17

How to calculate the value of a word ?

Lets take the example of a double word returned by the "**projector runtime, read**" commando.

returned data = Data[0]...Data[3]

value = $\text{Data}[0] \times 256^3 + \text{Data}[1] \times 256^2 + \text{Data}[2] \times 256 + \text{Data}[3]$.

1.3 Communication settings

Baud rate

Defines the speed of the data transfer. The baud rate can be set using the menu structure.



Consult the Owner's manual of the projector on how to change the baud rate setting.

Data Bits

Eight data bits are used for each character of the data transfer.

Parity

There is no parity bit used to perform error checking.

Stop Bits

One stop bit is used to define the end of a character.

1.4 Hardware

Overview

- Female D9-pin connector labelled "RS232 IN" used to connect the projector with the computer.

Pin out of the D9 connector:

Pin	Name	Full Name
1	CD	Carrier Detect
2	RxD	Received Data
3	TxD	Transmitted Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI	Ring Indicator

- Standard serial Cable
 - order number R9827560 (cable length = 15m)
 - order number R9827570 (cable length = 30m)

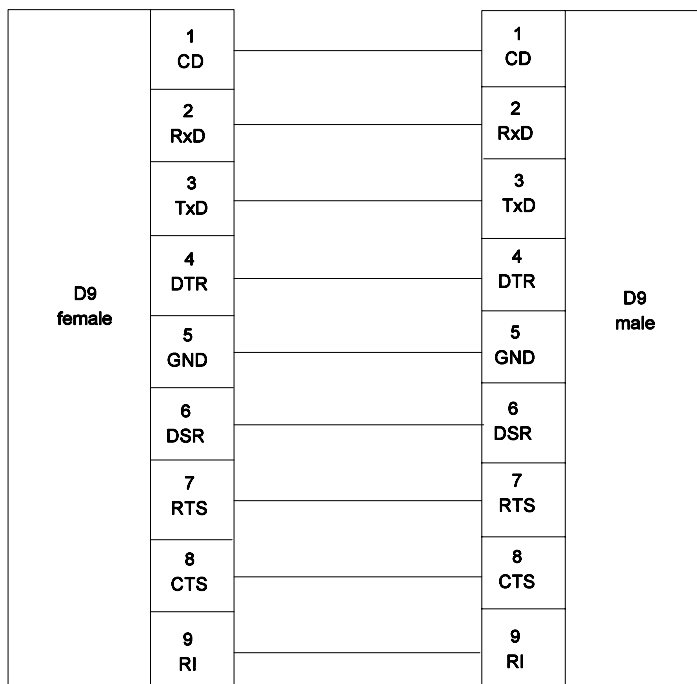


Image 1-1
connection: IBM PC or compatible → projector

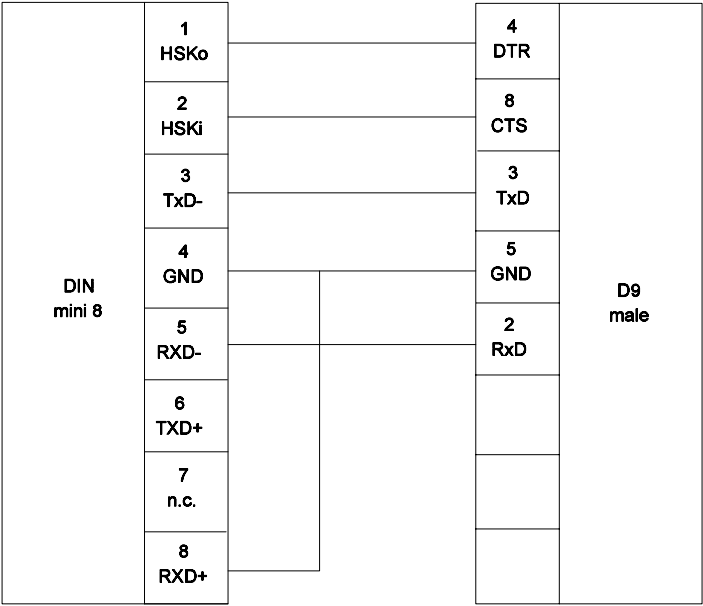


Image 1-2
connection: MAC → projector

Signal levels

Following table gives the signal levels corresponding to the different states:

State	Voltage
Off = 1	-9V
On = 0	+9V

1.5 Syntax

Characters

In this manual, all characters are expressed using the C- language syntax:

decimal values	ddd ²
hexadecimal values	\xhh ³

Negative values /numbers

The 2s complement number system is used to express negative numbers

Pascal- language string

A Pascal-language string consists of one or more characters. The first character of the string contains the length of the string. Therefore, a Pascal-language string is limited to 255 characters.

Pascal string 'Hello world'

length	\x0b
'h'	\x68
'e'	\x65
'l'	\x6c
'l'	\x6c
'o'	\x6f
"	\x20
'w'	\x77
'o'	\x6f
'r'	\x72
'l'	\x6c
'd'	\x64

C-language string

A C-language string consists of one or more characters. The last character of the string is always the NULL character \x00. Therefore, the length of a C-language string is determined by the position of the NULL character..

C string 'Hello world'

'h'	\x68
'e'	\x65
'l'	\x6c
'l'	\x6c
'o'	\x6f
"	\x20
'w'	\x77
'o'	\x6f
'r'	\x72
'l'	\x6c

2. ddd=0...255
3. hh=00...ff

'd'	\x64
NULL	\x00

**standard file**

Predefined file stored in read-only memory

**custom file**

File created by the user and stored in non-volatile read write memory

Filename

A filename is specified as a C-language string. This string has to follow some rules:

x	x	x	x	x	x	x	x	.	y	z	z	NULL
---	---	---	---	---	---	---	---	---	---	---	---	------

- length string = 12
- x = character of the base name formed by max 8 characters
- y = kind of file (= 1 character)

's'	standard file
'c'	custom file

- z = file index (= 2 characters: 0..9)
zz specifies the location in memory where the file is stored.
 - for standard files: zz = 00...maximum standard files
 - for custom files: zz = 00...63 where 00 is reserved for the file 'none .c00' (file which is loaded when no signal is applied)
- yzz is a unique combination. In other words, no two files can exist with the same extension yzz.



To specify more than one file you can use the question mark (?) and (*) wildcard character for x, y and z (or any other character).

?: This wildcard character can represent any possible character on a particular location.

* : This wildcard character can represent any possible character(s) following the wildcard's position in the string.

- "ntsc .c01"
- "svga_60v.s?7"
- "????????.???"
- "SV*.*"

1.6 Serial comms commands

Basic Commands

Basic commands are the commands used to control the basic parameters of the projector.

The **Contrast increment** command is a basic command, see Contrast, Increment, page 31

Advanced Commands

Advanced commands are used to control advanced parameters of the projector.

The **Pip loop focus** is an advanced parameter



This manual is divided in two parts, the first part contains the basic (elementary) commands while the second part gives an overview of the available advanced commands.

Some commands are illustrated with an example.

2. BASIC COMMANDS

Overview

- Identification Commands
- RCU commands
- Projector ON/OFF, Write
- Projector's Status, Read
- Lens commands
- Picture setting
- Menu Exit
- Source selection
- Scanned inputs, read
- Scan inputs
- Orientation, Write
- Orientation, Read
- Shutter, Write
- Shutter, Read
- Freeze, Write
- Freeze, Read
- Logo ON/OFF
- Background, Write
- Background, Read
- Aspect ratio, Write
- Aspect Ratio, Read
- Keystone, Write
- Keystone, Read
- Lamp commands
- Image files
- Color temperature
- Standby Timer, Write
- Standby Timer, Read
- Switching mode, Write
- Switching mode, Read
- Filmmode detection, Increment/Decrement
- Filmmode detection, Write
- Filmmode detection, Read
- Autoimage execute
- Blanking

2.1 Identification Commands

2.1.1 Device type, Read

Description

Reads the device (projector) type, the returned string is a Pascal-language string.see Syntax, page 8

Command

Command [0]	\x6b
-------------	------

Returned Data

Data[0] = byLength = 1 byte describing the length of the string.

Data[1] = strDeviceType = pascal-language string describing the device type.



An example of device type is “IQ”

2.1.2 Projector's Software type, Read

Description

Reads the Projector's Software type, the returned string is a Pascal-language string.see Syntax, page 8

Command

Command [0]	\x6a
-------------	------

Returned Data

Data[0] = byLength = 1 byte describing the length of the software version string.

Data[1] = strSoftwareType = pascal-language string describing the software type.



An example of software type is "Standard"

2.1.3 Projector's Software version, Read

Description

Reads the Projector's Software version, the returned string is a Pascal-language string.see Syntax, page 8

Command

Command [0]	\x60
-------------	------

Returned Data

Data[0] = byLength = 1 byte describing the length of the software version string.

Data[1] = strSoftwareVersion

2.1.4 Projector's Serial number, Read

Description

Reads the Projector's serial number, the returned string is a Pascal-language string.see Syntax, page 8

Command

Command [0]	\x61
-------------	------

Returned Data

Data[0] = \x07 = length of the serial number = 7 characters

Data[1] = string of length 7

2.1.5 Projector's runtime, Read

Description

Reads the Projector's runtime in seconds

Command

Command [0]	\x62
-------------	------

Returned Data

unsigned double word (4 bytes).see chapter 1. Serial communications Basics, Data words, page 4

Data[0] = msb

Data[1]

Data[2]

Data[3] = lsb

2.1.6 Projector address, Write

Description

Writes a new address to the projector

Command

Command [0]	\x6D
-------------	------

Data

Data[0] = unsigned byte

Example

Writes a new address to the projector, being "1"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6d
Data[0]	\x01
Checksum	\x6f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.1.7 Projector language, Read

Description

Reads the active language for the projector

Command

Command [0]	\x71
-------------	------

Returned Data

Data[0] = unsigned byte

byte value	language
0	English
1	Français
2	Deutsch
3	Español
4	Japanese
5	Chinese

Example

reads the active language, being "Français"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x71
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Data[0]	\x01
Checksum	\x07
Stop	\xff

2.1.8 Projector language, Write

Description

Sets a new language for the projector

Command

Command [0]	\x70
-------------	------

Data

Data[0] = unsigned byte

byte value	language
0	English
1	Français
2	Deutsch
3	Español
4	Japanese
5	Chinese

Example

Sets the language to "Français"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x70
Data[0]	\x01
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.1.9 Baudrate, Write

Description

Sets the baudrate

Command

Command [0]	\x75
-------------	------

Data

string = C-language string, for more info, Syntax, page 8

possible string values
9600
19200
38400
57600
115200

2.2 RCU commands

Description

Simulation of the RCU codes sent by the RCU remote control.

RCU commands, page 315

Command

Command [0]	\x30
-------------	------

Data

Data[0] = byIRcode = 1 byte representing the RC5 code of the function to be executed.

2.3 Projector ON/OFF, Write

Description

Switching ON/OFF the projector

Command

Switching the projector ON

Command [0]	\x65
-------------	------

Switching the projector OFF

Command [0]	\x66
-------------	------

Example

Switches the projector ON

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x65
Checksum	\x66
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.4 Projector's Status, Read

Description

Reads the Projector's Status

Command

Command [0]	\x67
-------------	------

Returned Data

Data [0] = unsigned byte

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
Not used	Not used	Cool down cycle active = 0 inactive = 1	Not used	Not used	Not used	Textbox ON = 1 OFF = 0	Projector ON = 1 OFF = 0



bit5 gives an indication on whether the projector can be (re)started or not (hot restrike), if the cool down cycle is active (bit5 = 0) the projector can not be restarted until the cool down cycle has been completed.

Example

Read the status being : \x23 :

- projector is ON
- textbox is on
- cool down cycle is inactive

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x67
Checksum	\x68
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Awnser)	
Start	\xfe
Projector address	\x01
Command[0]	\x67
Data[0]	\x23

Receive (Awnser)	
Checksum	\x8b
Stop	\xff

2.5 Lens commands

Overview

- Lens shift
- Lens Zoom
- Lens Focus

2.5.1 Lens shift

Description

Shifts the lens down or up depending on the data sent.

Command

Command [0]	\xf4
Command [1]	\x81

Data

Data[0] = byDirection = 1 byte, gives the shift direction:

0 = down ; 1 = up

2.5.2 Lens Zoom

Description

To Zoom the image in or out depending on the data sent.

Command

Command [0]	\xf4
Command [1]	\x82

Data

Data[0] = byDirection = 1 byte, gives the Zoom direction (in/out):

0 = out ; 1 = in

2.5.3 Lens Focus

Description

To Focus the image.

Command

Command [0]	\xf4
Command [1]	\x83

Data

Data[0] = byDirection = 1 byte : 0 = “-” ; 1 = “+”

2.6 Picture setting

Overview

- Contrast, Increment
- Contrast, decrement
- Contrast, write
- Contrast, Read
- Minimum Contrast, Read
- Maximum Contrast, Read
- Brightness, increment
- Brightness decrement
- Brightness, Write
- Brightness, Read
- Minimum Brightness, Read
- Maximum Brightness, Read
- Saturation increment
- Saturation, decrement
- Write Saturation
- Saturation, Read
- Minimum Saturation, Read
- Maximum Saturation, Read
- Tint, increment
- Tint, decrement
- Tint, Write
- Tint, Read
- Minimum Tint, Read
- Maximum Tint, Read
- Gamma, increment
- Gamma, decrement
- Gamma, Write
- Gamma, Read
- Minimum Gamma, Read
- Maximum Gamma, Read
- Phase, increment
- Phase, decrement
- Phase, Write
- Phase, Read
- Minimum Phase, Read
- Maximum Phase, Read

2.6.1 Contrast, Increment

Description

Increments the contrast by one.

Command

Command [0]	\x22
Command [1]	\x01

Example

Increment contrast of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x01
Checksum	\x24
Stop	\xff

2.6.2 Contrast, decrement

Description

Decrements the contrast by one.

Command

Command [0]	\x23
Command [1]	\x01

2.6.3 Contrast, write

Description

Writes a new contrast value to the projector

Command

Command [0]	\x20
Command [1]	\x01

Data

Data [0] = contrast value



Data[0] = unsigned byte

Example

Writes a new contrast value of \x20 to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x01
Data	\x20
Checksum	\x42
Stop	\xff

2.6.4 Contrast, Read

Description

Reads the actual contrast value of the projector

Command

Command [0]	\x21
Command [1]	\x01

Returned Data

Data [0] = contrast value

Example

Reads the actual contrast value of the projector, the answer being \x20

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x01
Checksum	\x23
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x01
Data [0]	\x20
Checksum	\x43
Stop	\xff

2.6.5 Minimum Contrast, Read

Description

Reads the minimum (range) contrast value of the projector

Command

Command [0]	\x26
Command [1]	\x01

Returned Data

Data [0] = minimum contrast value

Example

Reads the minimum contrast value of the projector, the answer being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x01
Checksum	\x28
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x01
Data [0]	\x00
Checksum	\x28
Stop	\xff

2.6.6 Maximum Contrast, Read

Description

Reads the Maximum (range) contrast value of the projector

Command

Command [0]	\x27
Command [1]	\x01

Returned Data

Data [0] = Maximum contrast value

Example

Reads the Maximum contrast value of the projector, the answer being \x64

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x01
Checksum	\x29
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x01
Data [0]	\x64
Checksum	\x8d
Stop	\xff

2.6.7 Brightness, increment

Description

Increments the Brightness by one.

Command

Command [0]	\x22
Command [1]	\x02

2.6.8 Brightness decrement

Description

Decrements the Brightness by one.

Command

Command [0]	\x23
Command [1]	\x02

2.6.9 Brightness, Write

Description

Writes a new Brightness value to the projector

Command

Command [0]	\x20
Command [1]	\x02

Data

Data [0] = contrast value



value = unsigned byte

Example

Writes a new Brightness value of \x20 to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x02
Data	\x20
Checksum	\x43
Stop	\xff

2.6.10 Brightness, Read

Description

Reads the actual Brightness value of the projector

Command

Command [0]	\x21
Command [1]	\x02

Returned Data

Data [0] = Brightness value

Example

Reads the actual Brightness value of the projector, the answer being \x20

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x02
Checksum	\x24
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x02
Data [0]	\x20
Checksum	\x44
Stop	\xff

2.6.11 Minimum Brightness, Read

Description

Reads the minimum (range) Brightness value of the projector

Command

Command [0]	\x26
Command [1]	\x02

Returned Data

Data [0] = minimum Brightness value

Example

Reads the minimum Brightness value of the projector, the answer being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x02
Checksum	\x29
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x02
Data [0]	\x00
Checksum	\x29
Stop	\xff

2.6.12 Maximum Brightness, Read

Description

Reads the Maximum (range) Brightness value of the projector

Command

Command [0]	\x27
Command [1]	\x02

Returned Data

Data [0] = Maximum Brightness value

Example

Reads the Maximum Brightness value of the projector, the answer being \x64

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x02
Checksum	\x30
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x02
Data [0]	\x64
Checksum	\x8e
Stop	\xff

2.6.13 Saturation increment**Description**

Increments the saturation by one.

Command

Command [0]	\x22
Command [1]	\x03

2.6.14 Saturation, decrement

Description

Decrements the Saturation by one.

Command

Command [0]	\x23
Command [1]	\x03

2.6.15 Write Saturation

Description

Writes a new Saturation value to the projector

Command

Command [0]	\x20
Command [1]	\x03

Data

Data [0] = Saturation value



value = unsigned byte

Example

Writes a new Brightness value of \x20 to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x03
Data	\x20
Checksum	\x44
Stop	\xff

2.6.16 Saturation, Read

Description

Reads the actual Saturation value of the projector

Command

Command [0]	\x21
Command [1]	\x03

Returned Data

Data [0] =Saturation value

Example

Reads the actual Saturation value of the projector, the answer being \x20

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x03
Checksum	\x25
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x03
Data [0]	\x20
Checksum	\x45
Stop	\xff

2.6.17 Minimum Saturation, Read

Description

Reads the minimum (range) Saturation value of the projector

Command

Command [0]	\x26
Command [1]	\x03

Returned Data

Data [0] = minimum Saturation value

Example

Reads the minimum Saturation value of the projector, the answer being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x03
Checksum	\x30
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x03
Data [0]	\x00
Checksum	\x30
Stop	\xff

2.6.18 Maximum Saturation, Read**Description**

Reads the Maximum (range) Saturation value of the projector

Command

Command [0]	\x27
Command [1]	\x03

Returned Data

Data [0] = Maximum Saturation value

Example

Reads the Maximum Saturation value of the projector, the answer being \x7f

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x03
Checksum	\x31
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x03
Data [0]	\x7f
Checksum	\xaa
Stop	\xff

2.6.19 Tint, increment**Description**

Increments the Tint by one.

Command

Command [0]	\x22
Command [1]	\x04

2.6.20 Tint, decrement

Description

Decrements the Tint by one.

Command

Command [0]	\x23
Command [1]	\x04

2.6.21 Tint, Write

Description

Writes a new Tint value to the projector

Command

Command [0]	\x20
Command [1]	\x04

Data

Data [0] = msb

Data [1] = lsb



type = signed word

Example

Writes a new Tint value of \x20 to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x04
Data[0]	\x00
Data[1]	\x20
Checksum	\x45
Stop	\xff

2.6.22 Tint, Read

Description

Reads the actual Tint value of the projector

Command

Command [0]	\x21
Command [1]	\x04

Returned Data

signed word :

Data [0] = msb

Data [1] = lsb

Example

Reads the actual Tint value of the projector, the answer being: \x00 \x20

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x04
Checksum	\x26
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x04
Data [0]	\x00
Data [1]	\x20
Checksum	\x46
Stop	\xff

2.6.23 Minimum Tint, Read

Description

Reads the minimum (range) Tint value of the projector

Command

Command [0]	\x26
Command [1]	\x04

Returned Data

signed word :

Data [0] = msb

Data [1] = lsb

Example

Reads the minimum Tint value of the projector, the answer being \xff\x4c

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x04
Checksum	\x31
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x04
Data [0]	\xff
Data [1]	\x4c
Checksum	\x76
Stop	\xff

2.6.24 Maximum Tint, Read**Description**

Reads the Maximum (range) Tint value of the projector

Command

Command [0]	\x27
Command [1]	\x04

Returned Data

signed word :

Data [0] = msb

Data [1] = lsb

Example

Reads the Maximum Tint value of the projector, the answer being \x00\x04

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x04
Checksum	\x32
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x04
Data [0]	\x00
Data [1]	\x04
Checksum	\xe0
Stop	\xff

2.6.25 Gamma, increment**Description**

Increments the Gamma by one.

Command

Command [0]	\x22
Command [1]	\x70

2.6.26 Gamma, decrement

Description

Decrements the Gamma by one.

Command

Command [0]	\x23
Command [1]	\x70

2.6.27 Gamma, Write**Description**

Writes a new Gamma value to the projector

Command

Command [0]	\x20
Command [1]	\x70

Data

Data [0] = Gamma value



Data[0] = unsigned byte

Example

Writes a new Gamma value of \x11 to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x70
Data	\x11
Checksum	\xa2
Stop	\xff

2.6.28 Gamma, Read

Description

Reads the actual Gamma value of the projector

Command

Command [0]	\x21
Command [1]	\x70

Returned Data

Data [0] = Gamma value

Example

Reads the actual Gamma value of the projector, the answer being \x11

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x70
Checksum	\x92
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x70
Data [0]	\x11
Checksum	\xa3
Stop	\xff

2.6.29 Minimum Gamma, Read

Description

Reads the minimum (range) Gamma value of the projector

Command

Command [0]	\x26
Command [1]	\x70

Returned Data

Data [0] = minimum Gamma value

Example

Reads the minimum Gamma value of the projector, the answer being \x10

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x70
Checksum	\x97
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x70
Data [0]	\x10
Checksum	\xa7
Stop	\xff

2.6.30 Maximum Gamma, Read

Description

Reads the Maximum (range) Gamma value of the projector

Command

Command [0]	\x27
Command [1]	\x70

Returned Data

Data [0] = Maximum Gamma value

Example

Reads the Maximum Gamma value of the projector, the answer being \x1c

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x70
Checksum	\x98
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x70
Data [0]	\x1c
Checksum	\xb4
Stop	\xff

2.6.31 Phase, increment**Description**

Increments the Phase by one.

Command

Command [0]	\x22
Command [1]	\x06

2.6.32 Phase, decrement

Description

Decrements the Phase by one.

Command

Command [0]	\x23
Command [1]	\x06

2.6.33 Phase, Write

Description

Writes a new Phase value to the projector

Command

Command [0]	\x20
Command [1]	\x06

Data

Data [0] = Phase value



value = unsigned byte

Example

Writes a new Phase value of \x1a to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x06
Data	\x1a
Checksum	\x41
Stop	\xff

2.6.34 Phase, Read

Description

Reads the actual Phase value of the projector

Command

Command [0]	\x21
Command [1]	\x06

Returned Data

Data [0] = Phase value

Example

Reads the actual Phase value of the projector, the answer being \x1a

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x06
Checksum	\x28
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x06
Data [0]	\x1a
Checksum	\x42
Stop	\xff

2.6.35 Minimum Phase, Read

Description

Reads the minimum (range) Phase value of the projector

Command

Command [0]	\x26
Command [1]	\x06

Returned Data

Data [0] = minimum Phase value

Example

Reads the minimum Phase value of the projector, the answer being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x06
Checksum	\x33
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x06
Data [0]	\x00
Checksum	\x33
Stop	\xff

2.6.36 Maximum Phase, Read

Description

Reads the Maximum (range) Phase value of the projector

Command

Command [0]	\x27
Command [1]	\x06

Returned Data

Data [0] = Maximum Phase value

Example

Reads the Maximum Phase value of the projector, the answer being \x1f

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x06
Checksum	\x34
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x06
Data [0]	\x1f
Checksum	\x4d
Stop	\xff

2.7 Menu Exit

Description

Exits all the menus (goes back to the operational mode)

Command

Command [0]	\x42
Command [1]	\x01

Example

Exits **all** the menu of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x42
Command[1]	\x01
Checksum	\x44
Stop	\xff

2.8 Source selection

Description

Selects an input source.

Command

Command [0]	\x38
-------------	------

Data

Data[0] = bySource, byte describing the source to be linked to the window.

Byte value	source
1	BNC's
2	D15
3	Composite video
4	SVideo
5	DVI
6	Firewire
7	SDI
8	IQ PC

For more info about the input configurations, see the projector's Owner's manual.

Data[1] = byMode

for BNC's and D15: the data byte gives the type of signal present on the BNC's/D15

Byte value	Mode
0	RGBHV
1	RGBCS (analog ⁴)
2	RGBCS (digital)
3	RG _s B
4	PrYPb
5	RGB video
6	RG _s B video

for composite video: the data byte describes the location of the composite video source signal to be selected.

Byte value	Mode
0	Video BNC
1	Vertical sync BNC
2	Red BNC
3	Green BNC
4	Blue BNC
5	SVideo Y

4. the signal present on the Cs signal is a composite video signal containing the composite sync

Byte value	Mode
6	SVideo C
7	Video 2 ⁵

for Svideo: the data byte describes the location of the S-Video signal to be selected.

Byte value	Mode
100 (x\64)	SVideo 1
101 (x\65)	SVideo on Vs and Video BNC
102 (x\66)	SVideo on R & B
103 (x\67)	SVideo 4 ⁵



If byMode is omitted the mode is automatically detected.

2.9 Scanned inputs, read

Description

read the scanned inputs and returns the type of source signal present .

Command

Command [0]	\x39
Command[1]	\x01

Returned Data

10 unsigned words.see chapter 1. Serial communications Basics, Data words, page 4

Data word	scanned input	possible sources, Wvalue =
wValue1	BNC (RED)	0 = none ; 1 = RED; 2 = Pr ; 3 = S-VID(chr) ; 4 = VideoR
wValue2	BNC (GREEN)	0 = none ; 1 = GREEN ; 2 = G _s ; 3 = Y ; 4 = VideoG
wValue3	BNC (BLUE)	0 = none ; 1 = BLUE ; 2 = Pb ; 3 = S-VID(lum) ; 4 = VideoB
wValue4	BNC (HS)	0 = none ; 1 = HS; 2 =CS
wValue5	BNC (VS)	0 = none ; 1 = VS; 2 = S-VID(chr) ; 3 = Video VS
wValue6	BNC (VIDEO)	0 = none ; 1 = VIDEO ; 3 = S-VID(lum)
wValue7	S-VIDEO (lum)	0 = none ; 1 = S-VID(lum) ; 2 = Video Y
wValue8	S-VIDEO (chr)	0 = none ; 1 = S-VID(chr) ; 2 = VideoC
wValue9	DVI	0 = none ; 1 = DVI
wValue10	PC	0 = none ; 1 = RGBHV ; 2 = RG _s B

For more info about the input configurations, see the projector's Owner's manual.

2.10 Scan inputs

Description

Scans the inputs, the results (sources) can be read using the "scanned inputs" read command.see Scanned inputs, read, page 70

Command

Command [0]	\x39
Command[1]	\x02

Data

Data[0] = unsigned byte : text box on (1) or off (0).

The textbox informs the user that the projector is scanning the inputs.

2.11 Orientation, Write

Description

Writes the orientation to the projector

Command

Command [0]	\x20
Command [1]	\x24

Data

Data [0] = unsigned byte



byte value:

\x00 = rear/table ; \x40 = front/table ; \x80 = front/ceiling ; \xc0 = rear/ceiling

Example

Set the orientation to front/table.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x24
Data[0]	\x40
Checksum	\x85
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.12 Orientation, Read

Description

Reads the orientation of the projector

Command

Command [0]	\x21
Command [1]	\x24

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = rear/table ; \x40 = front/table ; \x80 = front/ceiling ; \xc0 = rear/ceiling

Example

Read the orientation being : \x40 = front/table.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x24
Checksum	\x46
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x24
Data[0]	\x40
Checksum	\x86
Stop	\xff

2.13 Shutter, Write

Description

Activates the shutter

Command

Command [0]	\x20
Command [1]	\x42

Data

Data [0] = unsigned byte



byte value:

\x00 = CLOSE ; \x01 = OPEN

Example

opens the shutter

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x42
Data[0]	\x01
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.14 Shutter, Read

Description

Reads the shutter's position

Command

Command [0]	\x21
Command [1]	\x42

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = **CLOSE** ; \x01 = **OPEN**

Example

Read the shutter being \x01 = open

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x42
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x42
Data[0]	\x01
Checksum	\x65
Stop	\xff

2.15 Freeze, Write

Description

Freezes the projected image

Command

Command [0]	\x20
Command [1]	\x23

Data

Data [0] = unsigned byte



byte value:

\x00 = OFF; \x01 = ON

Example

activate the Freeze function

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x23
Checksum	\x44
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.16 Freeze, Read

Description

Reads whether the projected image is frozen or not.

Command

Command [0]	\x21
Command [1]	\x23

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the Freeze function, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x23
Checksum	\x45
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x23
Data[0]	\x00
Checksum	\x45
Stop	\xff

2.17 Logo ON/OFF

Description

Enables or disables the logo.

Command

Command [0]	\xf1
Command [1]	\x81

Data

Data [0] = unsigned byte



byte value:

0 = logo OFF; 1 = logo ON

Example

Enables the logo

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x81
Data[0]	\x01
Checksum	\x74
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.18 Background, Write

Description

Sets a particular background

Command

Command [0]	\x20
Command [1]	\x7B

Data

Data [0] = unsigned byte



byte value:

\x00 = **Logo** ; \x01 = **Blue** ; \x02 = **Black**

Example

Sets the background to "Logo"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x7b
Checksum	\x9c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.19 Background, Read

Description

Reads the actual background

Command

Command [0]	\x21
Command [1]	\x7b

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = **Logo** ; \x01 = **Blue** ; \x02 = **Black**

Example

Reads the actual background, being \x00 = Logo

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x7b
Checksum	\x9d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x7b
Data[0]	\x00
Checksum	\x9d
Stop	\xff

2.20 Aspect ratio, Write

Description

Sets the Aspect ratio

Command

Command [0]	\x20
Command [1]	\x0b

Data

Data [0] = unsigned byte



byte value:

\x00 = Auto ; \x01 = 4:3 ; \x02 = 5:4 ; \x03 = 16:9

Example

Sets the aspect ratio to "4x3"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x0b
Checksum	\x2c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.21 Aspect Ratio, Read

Description

Reads the actual Aspect Ratio

Command

Command [0]	\x21
Command [1]	\x0b

Returned Data

Data [0] = unsigned byte



byte value:

0 = Auto ; 1 = 4:3 ; 2 = 5:4 ; 3 = 16:9

Example

Read the PiP window which has the focus, result = \x01 (4:3)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0b
Checksum	\x2d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0b
Data [0]	\x01
Checksum	\x2e
Stop	\xff

2.22 Keystone, Write

Description

Adjusts the keystone

Command

Command [0]	\x20
Command [1]	\x50

Data

Signed word representing the keystone value.see chapter 1. Serial communications Basics, Data words, page 4

Data[0] = msb

Data[1] = lsb

Example

Sets the keystone to "0"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x50
Data[0]	\x00
Data[1]	\x00
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.23 Keystone, Read

Description

Reads the actual Keystone value

Command

Command [0]	\x21
Command [1]	\x50

Returned Data

signed word

Data[0] = MSB

Data[1] = LSB

Example

Reads the actual keystone value, being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x50
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x50
Data[0]	\x00
Data[1]	\x00
Checksum	\x72
Stop	\xff

2.24 Lamp commands

Overview

- Lamp Mode, Write
- Lamp Mode, Read
- Lamp Status, Read
- Lamp Warning, Read
- Lamp runtime, Read
- Lamps Serial number, Read

2.24.1 Lamp Mode, Write

Description

Writes the Lamp mode to the projector

Command

Command [0]	\x20
Command [1]	\x0c

Data

Data[0]: unsigned byte



data byte value: 0 = Single mode ; 1= Dual mode

Example

Write the mode \x00 (single mode) to the projector

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x0c
Data[0]	\x00
Checksum	\x2d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.24.2 Lamp Mode, Read

Description

Reads the actual Lamp mode of the projector

Command

Command [0]	\x21
Command [1]	\x0c

Returned Data

Data[0]: unsigned byte



data byte value: 0 = Single mode ; 1= Dual mode

Example

Reads the actual Lamp mode of the projector, the answer being \x00 = single mode.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0c
Checksum	\x44
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0c
Data [0]	\x00
Checksum	\x2e
Stop	\xff

2.24.3 Lamp Status, Read

Description

Reads the actual Lamp Status of the projector

Command

Command [0]	\x21
Command [1]	\x0d

Returned Data

Data [0] = Lamp Mode = unsigned byte see Lamp Mode, Read, page 87

Data [1] = Active lamp(s) = unsigned byte (see following table)

Lamp	byte	Hex
Lamp1	0001	\x01
Lamp2	0010	\x02
Lamp1+Lamp2	0011	\x03

Table 2-192
Lamp status: active lamps table

Example

Reads the actual Lamp Status of the projector, the answer being \x01 = Lamp1 (in single mode)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0d
Checksum	\x2f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0d
Data [0]	\x00
Data [1]	\x01

Receive (Answer)	
Checksum	\x30
Stop	\xff

2.24.4 Lamp Warning, Read

Description

Reads the actual Lamp Warning setting of the projector

Command

Command [0]	\x21
Command [1]	\x0e

Returned Data

Unsigned word composed of 2 bytes.see chapter 1. Serial communications Basics, Data words, page 4

Data [0] = first byte: msb

Data [1] = second byte : lsb

Example

Reads the actual Lamp warning setting of the projector, the answer being \x1E =30 hours

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0e
Checksum	\x30
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0d
Data [0]	\x00
Data [1]	\x1e
Checksum	\x4d
Stop	\xff

2.24.5 Lamp runtime, Read

Description

Reads the lamp runtime, the lamp (lamp1 or lamp2) runtime to be read is given in the data field.

Command

Command [0]	\x64
-------------	------

Data

Data[0] = unsigned byte:



data value: 1 = lamp1 ; 2 = lamp2

Returned Data

Data[0] = unsigned byte (1 = lamp1 ; 2 = lamp2)

unsigned double word (4 bytes) representing the runtime : see chapter 1. Serial communications Basics, Data words, page 4

Data[1] = msb

Data[2]

Data[3]

Data[4] = lsb

2.24.6 Lamps Serial number, Read

Description

Reads the Lamps Serial number, the lamp (lamp1 or lamp2) to be read is given in the data field.

Command

Command [0]	\x63
-------------	------

Data

Data[0] = unsigned byte



data value: 1= lamp1 ; 2=lamp2

Returned Data

string = Pascal-language string, for more info, Syntax, page 8

2.25 Image files

2.25.1 File, write

Description

This command writes an image file to the projector, this can be used to write to the projector a previously backed up file (on PC) which has been read with the “file, read” command.

The string used to represent the filename is of the C-string type. see chapter 1. Serial communications Basics, Syntax, page 8

Command

Command [0]	\xbe
-------------	------

Data

strFilename = string of the C-string type representing the filename.

FileData = binary data contained in the file.



The Filedata should be the same as the data read using the “file, read” command.

2.25.2 File, read

Description

This command reads an image file from the projector (for backup purposes, ...).
The string used to represent the filename is of the C-string type. see chapter 1. Serial communications Basics, Syntax, page 8

Command

Command [0]	\xbf
-------------	------

Send Data

strFilename = string of the C-string type representing the filename.

Returned Data

strFilename = string of the C-string type representing the filename.
FileData = binary data contained in the file.

2.25.3 File List, read

Description

This command reads a list of image files from the projector.
Wildcards can be used to specify the filenames.see chapter 1. Serial communications Basics, Syntax, page 8

Command

Command [0]	\xc0
-------------	------

Send Data

strFilemask1
...
strFilemaskN

Returned Data

strFilename1 = string of the C – string type representing the 1st filename.
...
strFilenameN = string of the C – string type representing the Nth filename.

2.25.4 Active files list, read

Description

This command reads a list of the active image files from the projector.

Command

Command [0]	\xc5
-------------	------

Returned Data

strFilename1 = string of the C – string type representing the active file in the Data window 1.

strFilename2 = string of the C – string type representing the active file in the Video window 1.

strFilename3 = string of the C – string type representing the active file in the Data window 2.

strFilename4 = string of the C – string type representing the active file in the Video window 2.

2.26 Color temperature

Overview

- Color temperature (Red/Blue), Increment
- Color temperature (Red/Blue), Decrement
- Color temperature Red/Bleu, Write
- Color temperature Red/Bleu, Read
- Color temperature, Read

2.26.1 Color temperature (Red/Blue), Increment

Description

Increments the Red/Blue Color temperature by one.

Command

Increments the Red color temperature by one

Command [0]	\x22
Command [1]	\x43

Increments the Blue color temperature by one

Command [0]	\x22
Command [1]	\x44

Example

Increment Red color temperature of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x43
Checksum	\x66
Stop	\xff

2.26.2 Color temperature (Red/Blue), Decrement

Description

Decrements the Red/Blue Color temperature by one.

Command

Decrement the Red color temperature by one

Command [0]	\x23
Command [1]	\x43

Decrement the Blue color temperature by one

Command [0]	\x23
Command [1]	\x44

Example

Decrement the Red color temperature of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x43
Checksum	\x67
Stop	\xff

2.26.3 Color temperature Red/Bleu, Write

Description

Writes a custom value for the different color temperatures to the projector

Commands

Red color temperature

Command [0]	\x20
Command [1]	\x43

Blue color temperature

Command [0]	\x20
Command [1]	\x44

Data

Unsigned word (2byte: msb-lsb).see chapter 1. Serial communications Basics, Data words, page 4

Data [0] = unsigned byte(msb)

Data [1] = unsigned byte(lsb)

2.26.4 Color temperature Red/Bleu, Read

Description

Reads the color temperature setting for the different colortemperatures from the projector

Commands

reads Red color temperature

Command [0]	\x21
Command [1]	\x43

reads Blue color temperature

Command [0]	\x21
Command [1]	\x44

Send Data

Data[0] = unsigned byte representing the colortemperature to be read

Color temperature	Data[0]
Projector white	\x00
Broadcast	\x20
Film	\x36
Video	\x41
Computer	\x5d



If Data[0] is omitted current used colortemp is returned

Returned Data

Unsigned 2 byte word (msb-lsb).see chapter 1. Serial communications Basics, Data words, page 4

Data [0] = unsigned byte (msb)

Data [1] = unsigned byte (lsb)

2.26.5 Color temperature, Read

Description

Reads the actual preset color temperature value from the projector

Commands

Command [0]	\x21
Command [1]	\x45

Returned Data

Data [0] = unsigned byte



data values: \x00 = projector white ; \x20 = broadcast ; \x36 = Film ; \x41 = Video ; \x5D = Computer ; \xff = custom

Example

Reads the actual preset color temperature of the projector, the answer being \x00 = projector white

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x45
Checksum	\x67
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x45
Data [0]	\x00
Checksum	\x67
Stop	\xff

2.27 Standby Timer, Write

Description

Adjusts the Standby Timer in a range from 180 to 3600.

Command

Command [0]	\x20
Command [1]	\x98

Data

Unsigned word representing the standby time value:

Data[0] = msb

Data[1] = lsb



range: 180 to 3600 seconds

0 seconds = Standby timer OFF

Example

Sets the standby time to "400"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x98
Data[0]	\x01
Data[1]	\x90
Checksum	\x4a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.28 Standby Timer, Read

Description

Reads the actual Standby Timer value

Command

Command [0]	\x21
Command [1]	\x98

Returned Data

Unsigned word representing the standby time value:

Data[0] = msb

Data[1] = lsb



range: 180 to 3600 seconds

0 seconds = Standby timer OFF

Example

Reads the actual standby timer value, being \x00 (Timer OFF)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x98
Checksum	\xba
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x98
Data[0]	\x00
Data[1]	\x00

2. Basic Commands

Receive (answer)	
Checksum	\xba
Stop	\xff

2.29 Switching mode, Write

Description

Writes the switching mode to the projector

Command

Command [0]	\x20
Command [1]	\x9a

Data

Data [0] = unsigned byte

Byte value	Switching mode
\x01	Seamless
\x02	Box in
\x03	Box out
\x04	shift in left
\x05	shift in right
\x06	shift in top
\x07	shift in bottom
\x08	vertical curtain open
\x09	vertical curtain close
\x0a	Horizontal curtain open
\x0b	Horizontal curtain close
\x0c	Fade in out

Example

Set the switching mode to seamless

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x9a
Data[0]	\x01
Checksum	\xbc
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06

2. Basic Commands

Receive (acknowledge)	
Checksum	\x07
Stop	\xff

2.30 Switching mode, Read

Description

Reads the Switching Mode of the projector

Command

Command [0]	\x21
Command [1]	\x9a

Returned Data

Data [0] = unsigned byte

Byte value	Switching mode
\x01	Seamless
\x02	Box in
\x03	Box out
\x04	shift in left
\x05	shift in right
\x06	shift in top
\x07	shift in bottom
\x08	vertical curtain open
\x09	vertical curtain close
\x0a	Horizontal curtain open
\x0b	Horizontal curtain close
\x0c	Fade in out

Example

Read the switching mode being \x01 = seamless.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9a
Checksum	\xbc
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2. Basic Commands

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9a
Data[0]	\x01
Checksum	\xbd
Stop	\xff

2.31 Filmmode detection, Increment/Decrement

Description

Increments/decrements the Filmmode detection setting (on/off)

Commands

increment :

Command [0]	\x22
Command [1]	\xa1

decrement :

command[0]	\x23
command[1]	\xa1

2.32 Filmmode detection, Write

Description

Enables/disables the filmmode detection.

Command

Command [0]	\x20
Command [1]	\xa1

Data

Data [0] = byte type



byte value:

0 = OFF; 1 = ON

Example

Enables the Filmmode detection

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\xa1
Data[0]	\x01
Checksum	\xc3
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.33 Filmmode detection, Read

Description

Reads whether the Filmmode detection is enabled or not

Command

Command [0]	\x21
Command [1]	\xa1

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the Automatic startup, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa1
Checksum	\xc3
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa1
Data[0]	\x00
Checksum	\xc3
Stop	\xff

2.34 Autoimage execute

Description

Executes the Autoimage function on the window defined by the first data byte, the second byte sets the Autoimage settings.

If the data bytes are omitted the Autoimage function will be executed on the active window (window which has the focus) using the actual Autoimage settings.

Command

Command [0]	\xf5
-------------	------

Data (optional)

Data[0] = byWindow

Data[1], Data[2] = wValue = word describing the settings of the AutoImage function

The 4 bits of the first byte (lsb) are used.

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
-	-	-	-	Start pixel-line	Phase	Contr/Bright	TotalPixels

Table 2-247
byte description

Example

executes Autoimage on the window which has the focus (the data bytes are omitted).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf5
Checksum	\xf6
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2.35 Blanking

Overview

- Blanking Reset
- Blanking enable, Write
- Blanking enable, Read
- Blanking, Write
- Blanking, Read
- Blanking, Increment
- Blanking, Decrement
- Minimum Blanking, Read
- Maximum Blanking, Read

2.35.1 Blanking Reset

Description

Allows the reset of the blanking values.

Command

Command [0]	\x17
-------------	------

2.35.2 Blanking enable, Write

Description

Enables the blanking of the display.

Command

Command [0]	\x20
Command [1]	\x56

Data

Data[0] = unsigned byte



byte value:

\x00 = disable ; \x01 = enable

2.35.3 Blanking enable, Read

Description

Reads whether the blanking of the display is enabled.

Command

Command [0]	\x21
Command [1]	\x56

Returned Data

Data[0] = unsigned byte



byte value:

\x00 = disable ; \x01 = enable

2.35.4 Blanking, Write

Description

Blanks the display.

Four blanking methods are possible:

- Top
- Bottom
- Left
- Right

Command

Top blanking:

Command [0]	\x20
Command [1]	\x4c

Bottom blanking:

Command [0]	\x20
Command [1]	\x4d

Left blanking:

Command [0]	\x20
Command [1]	\x4e

Right blanking:

Command [0]	\x20
Command [1]	\x4f

Data

Unsigned word (2 bytes) representing the number of pixels to be blanked.

Data [0] = msb

Data [1] = lsb

The maximum number of pixels which can be blanked depends on the native resolution of the panels



The panel size can be read using the Panel Size read command.

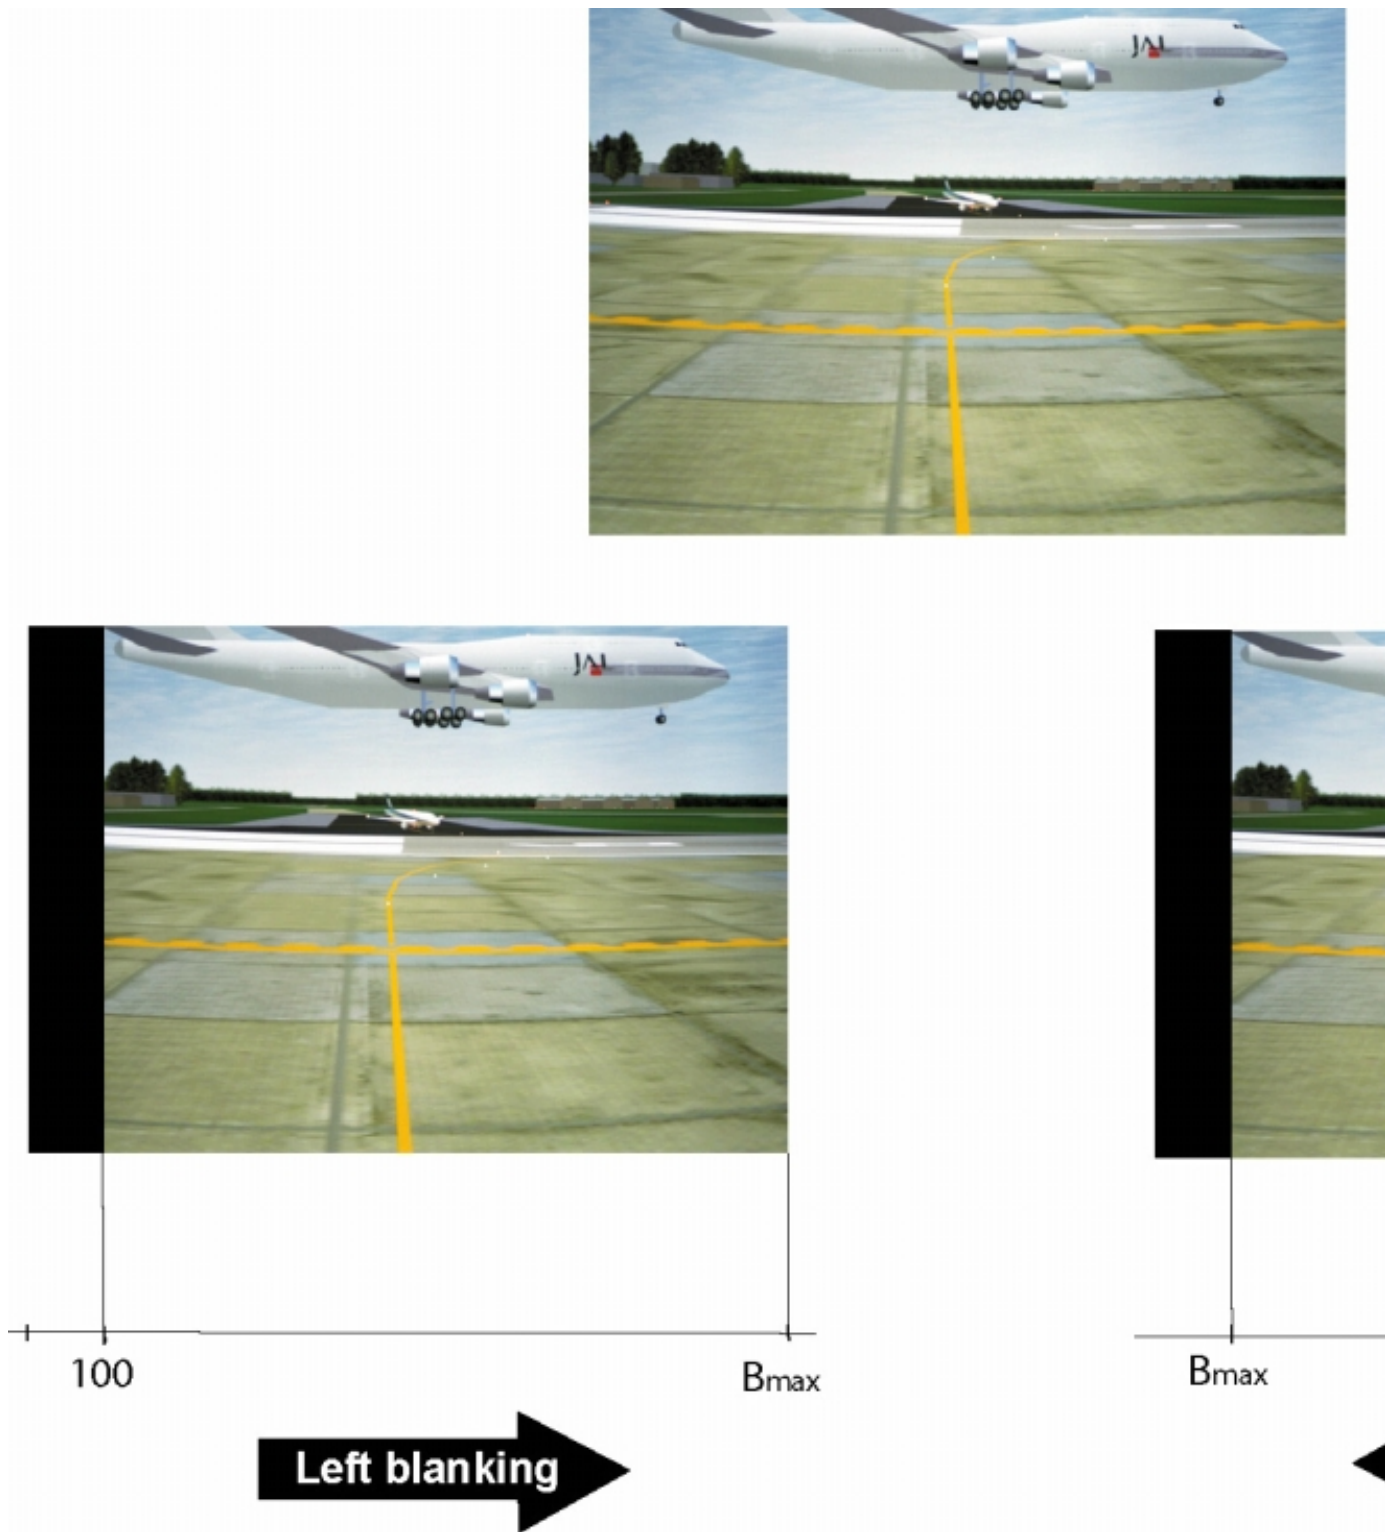


Image 2-1

2.35.5 Blanking, Read

Description

Reads the values of the blanking.

Command

Reads top blanking:

Command [0]	\x21
Command [1]	\x4c

Reads bottom blanking:

Command [0]	\x21
Command [1]	\x4d

Reads left blanking:

Command [0]	\x21
Command [1]	\x4e

Reads right blanking:

Command [0]	\x21
Command [1]	\x4f

Returned Data

Unsigned word (2 bytes) representing the number of pixels blanked.

Data [0] = msb

Data [1] = lsb

The maximum number of pixels blanked depends on the native resolution of the panels.

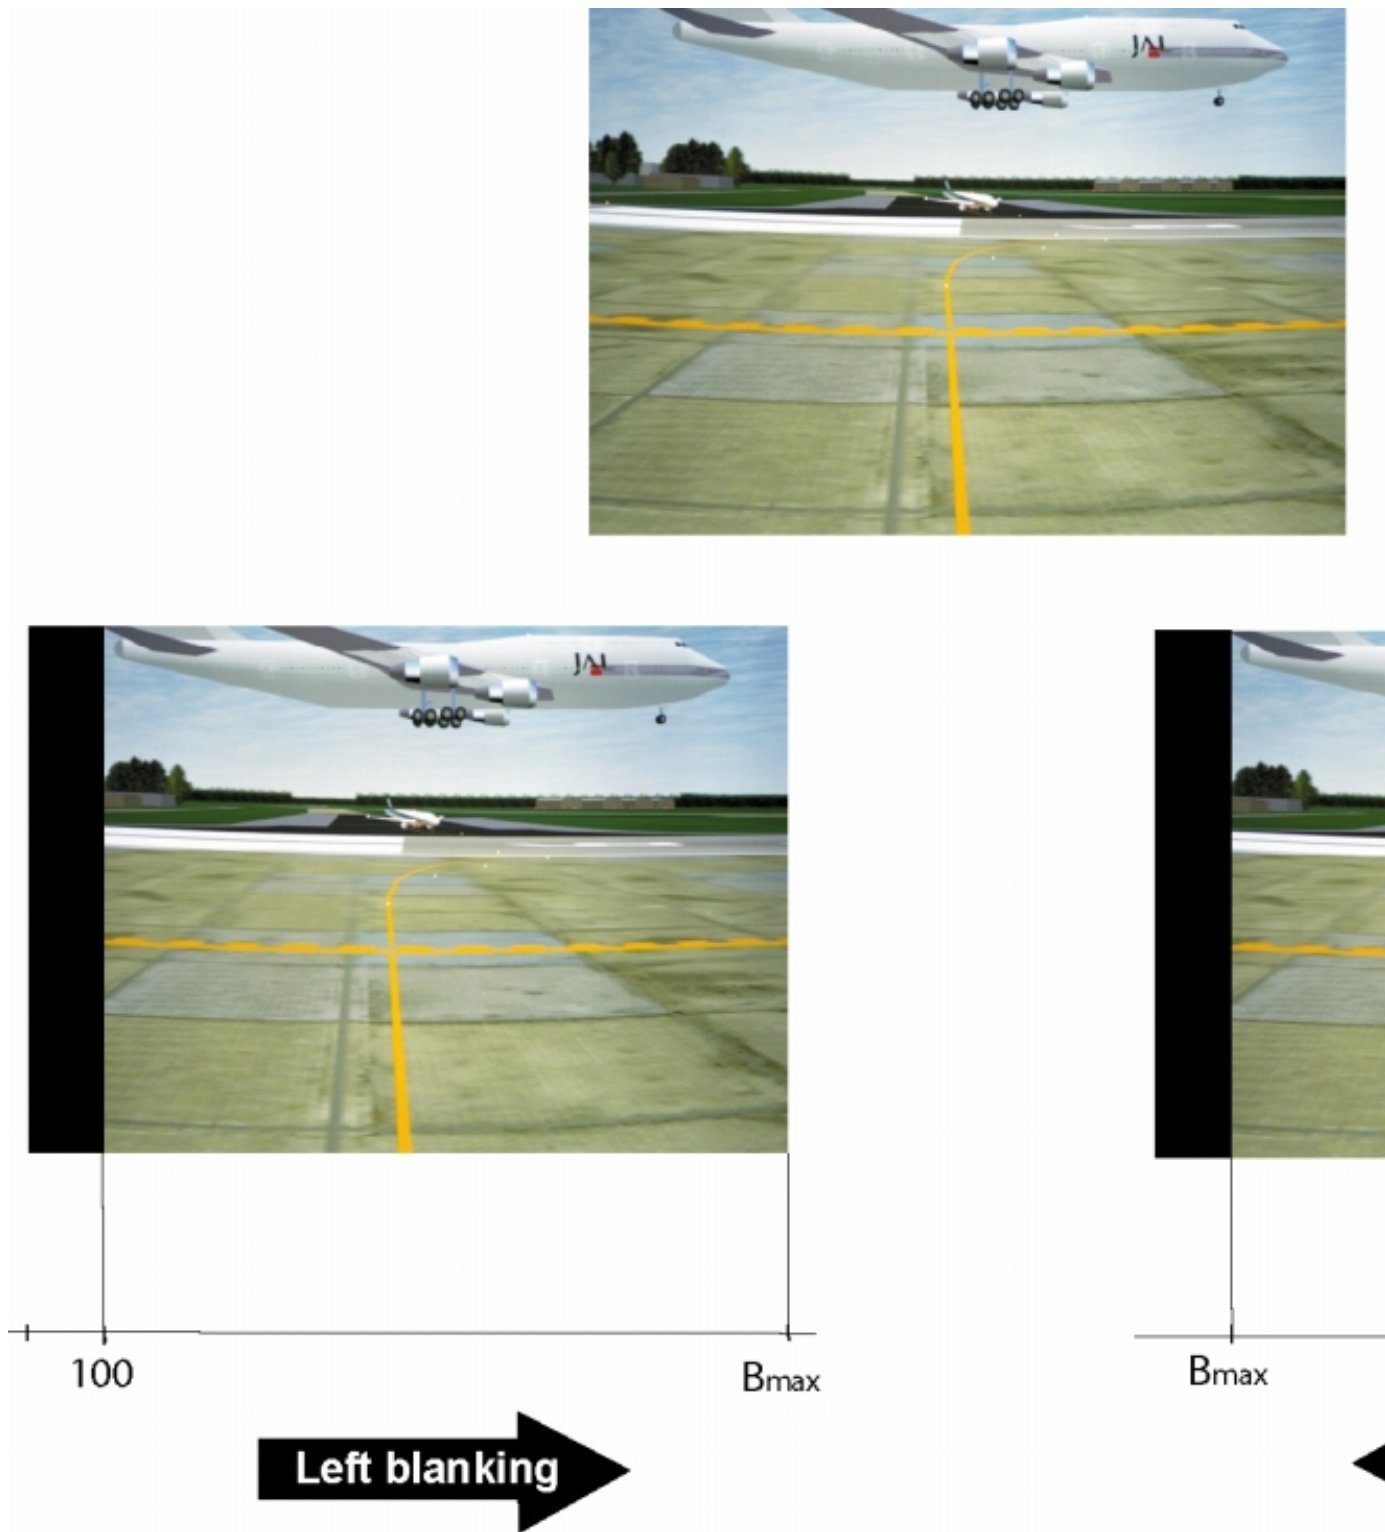


Image 2-2

2.35.6 Blanking, Increment

Description

Increments the blanking value by one.

Command

Increments Top blanking:

Command [0]	\x22
Command [1]	\x4c

Increments Bottom blanking:

Command [0]	\x22
Command [1]	\x4d

Increments Left blanking:

Command [0]	\x22
Command [1]	\x4e

Increments Right blanking:

Command [0]	\x22
Command [1]	\x4f

Data

WStep = unsigned word representing the amount of increments

The maximum number of pixels which can be blanked depends on the native resolution of the panels

2.35.7 Blanking, Decrement

Description

Decrements the blanking value by one.

Command

Decrements Top blanking:

Command [0]	\x23
Command [1]	\x4c

Decrements Bottom blanking:

Command [0]	\x23
Command [1]	\x4d

Decrements Left blanking:

Command [0]	\x23
Command [1]	\x4e

Decrements Right blanking:

Command [0]	\x23
Command [1]	\x4f

Data

WStep = unsigned word representing the amount of decrements

The maximum number of pixels which can be blanked depends on the native resolution of the panels

2.35.8 Minimum Blanking, Read

Description

Reads the Minimum values for the blanking.

Command

Reads minimal top blanking:

Command [0]	\x26
Command [1]	\x4c

Reads minimal bottom blanking:

Command [0]	\x26
Command [1]	\x4d

Reads minimal left blanking:

Command [0]	\x26
Command [1]	\x4e

Reads minimal right blanking:

Command [0]	\x26
Command [1]	\x4f

Returned Data

Unsigned word (2 bytes) representing the minimum value to be used for blanking.

Data [0] = msb

Data [1] = lsb

2.35.9 Maximum Blanking, Read

Description

Reads the Maximum values for the blanking.

Command

Reads minimal top blanking:

Command [0]	\x27
Command [1]	\x4c

Reads minimal bottom blanking:

Command [0]	\x27
Command [1]	\x4d

Reads minimal left blanking:

Command [0]	\x27
Command [1]	\x4e

Reads minimal right blanking:

Command [0]	\x27
Command [1]	\x4f

Returned Data

Unsigned word (2 bytes) representing the maximum value to be used for blanking.

Data [0] = msb

Data [1] = lsb



The maximum number of pixels which can be blanked depends on the native resolution of the panels

3. ADVANCED COMMANDS

Overview

- Lamp Commands
- Picture In Picture
- Digital Zoom
- Audio commands
- Automatic startup, Write
- Automatic startup, Read
- Startup screen, Write
- Startup screen, Read
- Input balance
- AutoImage setup, Write
- AutoImage setup, Read
- Automatic Gain Control, write
- Automatic Gain Control, Read
- Manual Gain Control value, Write
- Manual Gain Control value, Read
- Gain Control, Increment/Decrement
- Minimum/Maximum AGC value, Read
- Automatic Gain Control interval, Write
- Automatic Gain Control Interval, Read
- Data input format, Increment/Decrement
- Data input format, write
- Data input format, Read
- Image files
- I²C diagnosis, Read
- Serviceable parts history, Read
- Lamp and power supply history, Read
- Serviceable parts erase history
- Dirty dust filters, Read
- Power supply error, Read
- Lamp error, Read
- Panel size, Read
- Logo status, Read
- Take screenshot (Logo)
- Save screenshot (Logo)
- Abort saving screenshot (Logo)
- Load logo
- iQ PC

3.1 Lamp Commands

3.1.1 Reset Lamp runtime, Write

Description

Reset the Lamp runtime of the projector, the lamp(s) to reset are given in the Data field along with a Pascal string representing the serial number

Command

Command [0]	\x68
-------------	------

Data

Data[0]: unsigned byte



data byte value: 1= lamp1 ; 2= lamp2

Pascal type string of length 7 representing the serial number.see Syntax, page 8

3.1.2 Lamp History, Read

Description

Reads the actual Lamp History of the projector

Command

Command [0]	\x21
Command [1]	\x0f

Returned Data

Array containing maximum 20 elements, each element containing a C- language strings and 5bytes:

- 1 byte for the lamp (1 = lamp1; 2 = lamp2)
- 1 C language string made of 6 bytes for the serial number and 1 STOP byte
- 4 bytes for the Runtime

	Data11	Data10	Data9	Data8	Data7	Data6	Data5	Data4	Data3	Data2	Data1	Data0
1 st el.	LAMP	SN	SN	SN	SN	SN	SN	STOP	RT	RT	RT	RT
...												
20 th el	LAMP	SN	SN	SN	SN	SN	SN	STOP	RT	RT	RT	RT

3.2 Picture In Picture

Overview

- PiP Loop Focus
- PiP Focus, Read
- PiP Focus, Write
- PiP layout , Read
- PiP layout, Write
- PiP layout List, Read
- PiP current layout, Read
- PiP select layout, Write
- PiP save layout
- PiP save layout as
- PiP rename layout
- PiP remove Layout
- PiP remove window
- Addable sources List, read
- PiP add window
- PiP Priority Write
- Priority, Read
- PiP List active sources, Read
- PiP last added window type, Read

3.2.1 PiP Loop Focus

Description

Activates the PiP Loop Focus mode on the Projector (allows to browse through the PiP windows)

Command

Command [0]	\x12
Command [1]	\x01

Example

Activate the PiP Loop Focus

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x01
Checksum	\x14
Stop	\xff

3.2.2 PiP Focus, Read

Description

Returns the PiP window which has the focus.

Command

Command [0]	\x12
Command [1]	\x02

Returned Data

Data [0] = Window type byte



Window type byte value:

0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Example

Read the PiP window which has the focus, result = \x01 (Data A)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x02
Checksum	\x15
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x02
Data [0]	\x01
Checksum	\x16
Stop	\xff

3.2.3 PiP Focus, Write

Description

Gives the focus to a particular PiP window .

Command

Command [0]	\x12
Command [1]	\x03

Data

Data [0] = Window type byte



Window type byte value:

0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Example

Gives the focus to a particular PiP window , here: \x01 (Data A)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x03
Checksum	\x16
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.2.4 PiP layout , Read

Description

Returns the configuration of a particular layout.

Command

Command [0]	\x12
Command [1]	\x0f

Sent Data

strPipName = string representing the name of the layout



The strPipname string is of the C-language type. see chapter 1. Serial communications Basics, Syntax, page 8

Returned Data

PiPData = binary data describing the PiP layout.

The data used to write a layout using the "write layout" command should be of the same form. see PiP layout, Write, page 136

The data in question is not meant to be analyzed but can be used to write to another projector for instance.

3.2.5 PiP layout, Write

Description

Configures a particular PiP layout.

Command

Command [0]	\x12
Command [1]	\x10

Sent Data

strPipName



The strPipname string is of the C-language type. see chapter 1. Serial communications Basics, Syntax, page 8

PiPData = binary data describing the PiP layout.

The data used to write a layout using the “write layout” command should be of the same form of the data read using the “read PIP layout” command.see PiP layout , Read, page 135

The data to be send is the data previously read by the PiP layout read command.

3.2.6 PiP layout List, Read

Description

Returns the PiP layout list.

Number of layouts (N) may vary from 1 (factory layouts) to 10.

Command

Command [0]	\x12
Command [1]	\x04

Send data

One or more filter masks (wildcards) must be specified, the logic function used between the different filter masks is the OR function.

The mask is sent in the form of a string (thus always terminated by a the stop byte \x00) .

strMask1

...

strMaskN



An example of a wildcard is the asterisk (*), the hexadecimal notation of the asterisk being \x2a .

Returned Data

strPipname1

...

strPipnameN



The strPipname and strMask strings are of the C-language type. see chapter 1. Serial communications Basics, Syntax, page 8

Example

Reads the actual PiP layout list using the wildcard (*), i.e. returns all the layouts.

Result = Full screen, 2by2 layout.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x04
Data[0]	\x2a
Data[1]	\x00
Checksum	\x41
Stop	\xff
Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00

3. Advanced Commands

Receive (acknowledge)	
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x04
Data [0]	\x46
Data [1]	\x75
Data [2]	\x6c
Data [3]	\x6c
Data [4]	\x2d
Data [5]	\x73
Data [6]	\x63
Data [7]	\x72
Data [8]	\x65
Data [9]	\x65
Data [10]	\x6e
Data [11]	\x00
Data [0]	\x32
Data [1]	\x62
Data [2]	\x76
Data [3]	\x32
Data [4]	\x20
Data [5]	\x72
Data [6]	\x61
Data [7]	\x73
Data [8]	\x74
Data [9]	\x65
Data [10]	\x72
Data [11]	\x00
Checksum	\x44
Stop	\xff

3.2.7 PiP current layout, Read

Description

Returns the current PiP layout.

Command

Command [0]	\x12
Command [1]	\x05

Returned Data

strPipname = string



The string is of the C-language type see chapter 1. Serial communications Basics, Syntax, page 8

Example

Reads the actual PiP layout , result = Full screen.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x05
Checksum	\x18
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Awnser)	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x05
Data [0]	\x46
Data [1]	\x75
Data [2]	\x6c
Data [3]	\x6c
Data [4]	\x2d

3. Advanced Commands

Receive (Awnser)	
Data [5]	\x73
Data [6]	\x63
Data [7]	\x72
Data [8]	\x65
Data [9]	\x65
Data [10]	\x6e
Data [11]	\x00
Checksum	\x58
Stop	\xff

3.2.8 PiP select layout, Write

Description

Sets a PiP layout.

Command

Command [0]	\x12
Command [1]	\x06

Data

strPipname = string



The string is of the C-language type see chapter 1. Serial communications Basics, Syntax, page 8

Example

Sets the PiP layout = Full screen.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x06
Data[0]	\x46
Data[1]	\x75
Data[2]	\x6c
Data[3]	\x6c
Data[4]	\x2d
Data[5]	\x73
Data[6]	\x63
Data[7]	\x72
Data[8]	\x65
Data[9]	\x65
Data[10]	\x6e
Data[11]	\x00
Checksum	\x59
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06

3. Advanced Commands

Receive (acknowledge)	
Checksum	\x07
Stop	\xff

3.2.9 PiP save layout

Description

Saves the active PiP layout.

Command

Command [0]	\x12
Command [1]	\x07

3.2.10 PiP save layout as**Description**

Saves a PiP layout .

Command

Command [0]	\x12
Command [1]	\x08

Data

strPipname = string of maximum 12 characters (including the \x00 byte)



The string is of the C-language type see chapter 1. Serial communications Basics, Syntax, page 8

Example

Saves the active PiP layout as "test".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x08
Data[0]	\x74
Data[1]	\x65
Data[2]	\x73
Data[3]	\x74
Data[4]	\x00
Checksum	\xdb
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.2.11 PiP rename layout

Description

Renames a PiP layout .

Command

Command [0]	\x12
Command [1]	\x09

Data

strOldPipname = string (old name of the layout)

strNewPipname = string of max 12 characters (new layout name)



The string is of the C- language type see chapter 1. Serial communications Basics, Syntax, page 8

Example

Renames the PiP layout "test" to "test2".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x09
Data[0]	\x74
Data[1]	\x65
Data[2]	\x73
Data[3]	\x74
Data[4]	\x00
Data[5]	\x74
Data[6]	\x65
Data[7]	\x73
Data[8]	\x74
Data[9]	\x32
Data[10]	\x00
Checksum	\xce
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06

3. Advanced Commands

Receive (acknowledge)	
Checksum	\x07
Stop	\xff

3.2.12 PiP remove Layout

Description

Removes a PiP layout.

Command

Command [0]	\x12
Command [1]	\x0a

Data

strPipname1

...

strPipnameN



The strPipnameN string is of the C-language type. see chapter 1. Serial communications Basics, Syntax, page 8

Wildcards can be used to specify strPipnameN.see Syntax, page 8

Example

Removes the PiP layout "test".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x0a
Data[0]	\x74
Data[1]	\x65
Data[2]	\x73
Data[3]	\x74
Data[4]	\x00
Checksum	\xdd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.2.13 PiP remove window

Description

Removes a particular PiP window .

Command

Command [0]	\x12
Command [1]	\x0b

Data

Data [0] = Window type byte



Window type byte value:

0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Example

Removes a particular PiP window , here: \x01 (Data A)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x0b
Data[0]	\x01
Checksum	\x1f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.2.14 Addable sources List, read**Description**

This command reads a list of the sources which can be added to the PiP using the “add window” command.see PiP add window, page 150

Command

Command [0]	\x12
Command [1]	\x0d

Returned Data

strSourceName1

...

strFilenameN

3.2.15 PiP add window

Description

Adds a PiP window .

To add a window following have to be specified:

- source to be visualized in the window
- Mode of the source input
- position and size of the window
- order (priority) of the window (front, background)

Command

Command [0]	\x12
Command [1]	\x0c

Data

Data[0] = bySource, byte describing the source to be linked to the window.

Byte value	source
1	BNC's
2	D15
3	Composite video
4	SVideo
5	DVI
6	Firewire
7	SDI
8	PC

Data[1] = byMode, byte describing the signals connected to the input section.

For more info about the input configurations, see the projector's Owner's manual.

for BNC's and D15:

Byte value	Mode
0	RGBHV
1	RGBCS (analog)
2	RGBCS (digital)
3	RG _s B
4	PrYPb
255	detect slot mode

for composite video:

Byte value	Mode
0	Video BNC
1	Vertical sync BNC
2	Red BNC
3	Green BNC
4	Blue BNC

Byte value	Mode
5	SVideo Y
6	SVideo C

for Svideo:

Byte value	Mode
100	SVideo 1
101	SVideo on R & B
102	SVideo on Vs and Video BNC

Data[2], Data[3] = Xsize word

Data[4], Data[5] = Ysize word

Data[6], Data[7] = Xposition word

Data[8], Data[9] = Yposition word



Xsize, Ysize, Xpos, Ypos are given in “pixels”

for a graphics projector version : x = 1 ...1024 ; y = 1..768

Note that the panel size (projector version) can be read using the Panel size command, Panel size, Read , page 279



Xsize and Ysize determine the size of the window, since the aspect ratio is fixed, one of the values may be sufficient to determine the size of the window.

If the 2 values do not match the aspect ratio, then Xsize is taken as reference and Ysize is calculated to match the aspect ratio.

Data[10] = byPriority byte: 0 =Top ;...; 3= Bottom

3.2.16 PiP Priority Write

Description

Sets the priority (order) of a particular window

Command

Command [0]	\x12
Command [1]	\x0e
Command [2]	1, 2, 3

Command [2] : 1= Top ; 2 = bring to front ; 3 = send to back

Data

Data [0] = Window type byte



Window type byte value:

0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Example

Brings the Data A window to the front

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x12
Command[1]	\x0e
Command[2]	\x02
Data[0]	\x00
Checksum	\x23
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.2.17 Priority, Read

Description

Reads the priority (order) of a particular window.

Command

Command [0]	\x12
Command [1]	\x0e
Command [2]	\x00

Data

Data [0] = Window type byte



Window type byte value:

0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Returned Data

Data [0] = unsigned byte



0 = Top ; ... ; 3 = bottom

3.2.18 PiP List active sources, Read

Description

Returns the PiP active sources, for each window. The returned data is composed of 4 times a determined sequence.

Command

Command [0]	\x12
Command [1]	\x11

Returned Data

Returned data is 4 times following data :

Data [0] = Window type byte ; 0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

Data [1] = Window visible byte ; 0 = NO ; 1 = YES

Data [2] = file found byte ; 0 = NO ; 1 = YES

Data [3] = input selection byte

for video windows : 0 = decoder layer1 ; 1 = decoder layer3 ; 4 = SDI ; 0xff = None

for data windows : 0 = data ; 1 = SBC ; 0xff = None

Data [4] = source selection word

for video windows

word value	Source
0	video
1	VS
2	R
3	G
4	B
5	Lum
6	Chr
7	Video2
20	PrYPb on RGB
21	RGB video on RGB
22	RG _s B video on RGB
100	S-video
101	S-Video2
102	S-Video3
103	S-Video4
300	SDI
0xff	none

for data windows:

word value	source
0	RGBHV
1	RGBC _s (digital)

word value	source
2	RGBC _S (analog) ⁶
3	RG _S B
100	DssPryPb
101	RGB Video
102	RG _S B Video
200	DVI
0xff	none

6. the signal present on the Cs signal is a composite video signal containing the composite sync

3.2.19 PiP last added window type, Read

Description

Returns the last added window type

Command

Command [0]	\x12
Command [1]	\x12

Returned Data

Data [0] = Window type byte ; 0 = Data A ; 1 = Video A ; 2 = Data B ; 3 = Video B

3.3 Digital Zoom

Overview

- Minimum/Maximum window size, Read
- Minimum/Maximum window X position, Read
- Minimum/Maximum window Yposition, Read
- Window size, Write
- Window X position (panning), Write
- Window Y position (panning), Write
- Window size, Read
- Window X position (panning), read
- Window Y position (panning), read
- Window size, Increment
- Window X position, Increment
- Window Y position, Increment
- Window size, Decrement
- Window X position, Decrement
- Window Y position, Decrement

3.3.1 Minimum/Maximum window size, Read

Description

Reads the minimum/maximum (range) zoom factor.

Commands

read minimum:

Command [0]	\x26
Command [1]	\x81

read maximum:

Command[0]	\x27
Command[1]	\x81

Returned Data

Data [0]...Data[3] = double word (4 bytes) = min/max value

Data[4] = byte describing the decimal part (2 digits)



min size = 5%

max size = 135.733 %

3.3.2 Minimum/Maximum window X position, Read

Description

Reads the minimum/maximum (range) zoom window X position.

Commands

read minimum:

Command [0]	\x26
Command [1]	\x82

read maximum:

Command[0]	\x27
Command[1]	\x82

Returned Data

Data [0]...Data [3] = double word (4 bytes) = min/max value

Data [4] = byte describing the decimal part (2 digits)

3.3.3 Minimum/Maximum window Yposition, Read

Description

Reads the minimum/maximum (range) zoom window Y position.

Commands

read minimum:

Command [0]	\x26
Command [1]	\x83

read maximum:

Command[0]	\x27
Command[1]	\x83

Returned Data

Data [0]...Data [3] = double word (4 bytes) = min/max value

data [4] = byte describing the decimal part (2 digits)

3.3.4 Window size, Write

Description

This command sets the size of the zoom window.

This is done by sending a percentage, 100% corresponds to the default size of the window.

Command

Command [0]	\x20
Command [1]	\x81

Data

Data [0]...Data[3] = double word (= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the desired percentage (100% = window size).

> 100 = zoom in

< 100 = zoom out

Data[4] = byte describing the decimal part (2 digits). This byte is Optional

3.3.5 Window X position (panning), Write

Description

This command sets the X position of the zoom window.

This is done by sending a percentage.

100% corresponds to a zoom window at the right border of the window.

0% corresponds to a zoom window at the left border of the window.

50% corresponds to a zoom window in the middle of the window.

Command

Command [0]	\x20
Command [1]	\x82

Data

Data [0]...Data[3] = double word(= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the desired percentage (100% = right border).

Data [4] = unsigned byte representing 2 decimal digits (0–100). This byte is optional



Values >100 are truncated to 100%

3.3.6 Window Y position (panning), Write

Description

This command sets the Y position of the active window (window which has the focus).

This is done by sending a percentage.

100% corresponds to a zoom window at the bottom of the window.

0% corresponds to a zoom window at the top of the window.

50% corresponds to a zoom window in the middle of the window.

Command

Command [0]	\x20
Command [1]	\x83

Data

Data [0]...Data [3] = double word(= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the desired percentage (100% = bottom).

Data [4] = unsigned byte representing 2 decimal digits (0–100). This byte is optional.



Values >100 are truncated to 100%.

3.3.7 Window size, Read

Description

This command reads the size of the zoom window.

Command

Command [0]	\x21
Command [1]	\x81

Returned Data

Data [0]...Data [3] = double word(= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the actual percentage (100% = initial window size).

> 100 = window has been zoomed in

< 100 = window has been zoomed out

Data[4] = unsigned byte : represents the decimal part

3.3.8 Window X position (panning), read

Description

This command reads the X position of the active window (window which has the focus).

100% corresponds to a zoom window at the right border of the window.

0% corresponds to a zoom window at the left border of the window.

50% corresponds to a zoom window in the middle of the window.

Command

Command [0]	\x21
Command [1]	\x82

Returned Data

Data [0]...Data [3] = double word(= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the actual X position (100% = right border).

Data[4] = unsigned byte : represents the decimal part

3.3.9 Window Y position (panning), read

Description

This command reads the Y position of the active window (window which has the focus).

100% corresponds to a zoom window at the bottom of the window.

0% corresponds to a zoom window at the top of the window.

50% corresponds to a zoom window in the middle of the window.

Command

Command [0]	\x21
Command [1]	\x83

Data

Data [0]...Data [3] = double word(= 4 bytes; see chapter 1. Serial communications Basics, Data words, page 4) corresponding to the actual Y position (100% = right border).

Data[4] = unsigned byte : represents the decimal part.

3.3.10 Window size, Increment

Description

This command increments the zoom factor of the active window (window which has the focus).

This is done by incrementing the size percentage, the rate of increment can also be specified.

Command

Command [0]	\x22
Command [1]	\x81

Data

Data [0] = byRepeat =1 byte to define the rate of increment

3.3.11 Window X position, Increment

Description

This command increments the X position of the zoom window.

This is done by incrementing the X position percentage, the rate of increment can also be specified

Command

Command [0]	\x22
Command [1]	\x82

Data

Data [0] = byRepeat =1 byte to define the rate of increment

3.3.12 Window Y position, Increment

Description

This command increments the Y position of the zoom window.

This is done by incrementing the Y position percentage, the rate of increment can also be specified

Command

Command [0]	\x22
Command [1]	\x83

Data

Data [0] = byRepeat =1 byte to define the rate of increment

3.3.13 Window size, Decrement

Description

This command decrements the size of the zoom window.

This is done by decrementing the size percentage, the rate of decrement can also be specified

Command

Command [0]	\x23
Command [1]	\x81

Data

Data [0] = byRepeat =1 byte to define the rate of decrement

3.3.14 Window X position, Decrement

Description

This command decrements the X position of the zoom window.

This is done by decrementing the X position percentage, the rate of decrement can also be specified

Command

Command [0]	\x23
Command [1]	\x82

Data

Data [0] = byRepeat =1 byte to define the rate of decrement

3.3.15 Window Y position, Decrement

Description

This command decrement the Y position of the zoom window.

This is done by decrementing the Y position percentage, the rate of decrement can also be specified

Command

Command [0]	\x23
Command [1]	\x83

Data

Data [0] = byRepeat =1 byte to define the rate of decrement

3.4 Audio commands

Overview

- Optional Audio features
- Audio configuration Mute, Write
- Audio configuration Mute, Read
- Audio input selection, Write
- Audio input selection, Read
- Volume, Write
- Volume, Read
- Minimum/Maximum Volume, Read
- Volume, Increment
- Volume, Decrement
- Bass, Write
- Bass, Read
- Bass, Increment
- Bass, Decrement
- Minimum/Maximum Bass, Read
- Treble, Write
- Treble, Read
- Treble, Increment
- Treble, Decrement
- Minimum/Maximum Treble, Read
- Balance, Write
- Balance, Read
- Balance, Increment
- Balance, Decrement
- Minimum/Maximum Balance, Read
- Mode, Write
- Mode, Read
- Mode, Increment
- Mode, Decrement
- Minimum/Maximum Mode, Read

3.4.1 Optional Audio features

Optional

The IQ audio is optional and is available as an upgrade kit.

3.4.2 Audio configuration Mute, Write

Description

Mutes or activates the audio output .

Command

Command [0]	\x14
Command [1]	\x20

Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Data [1] = byte : 0 = Mute OFF; 1 = Mute ON

3.4.3 Audio configuration Mute, Read

Description

Reads the Mute state (Mute ON/OFF).

Command

Command [0]	\x14
Command [1]	\x21

Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Returned Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Data [1] = byte : 0 = Mute OFF; 1 = Mute ON

3.4.4 Audio input selection, Write

Description

Links one of the audio inputs to one of the sources.

Command

Command [0]	\x15
Command [1]	\x20

Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Data [1] = byte representing the source to be linked:

byte value	source
0	data on BNC's
1	Component video
2	RGB Video
3	RG _B Video
4	PC
5	Video
6	Video Vs
7	Video R
8	Video G
9	Video B
10	Video Lum
11	Video Chr
12	Video 2
13	S-Video1
14	S-Video2
15	S-Video3
16	S-Video4
17	DVI
18	SDI
19	iQ PC

3.4.5 Audio input selection, Read

Description

Links one of the audio inputs to one of the sources.

Command

Command [0]	\x15
Command [1]	\x21

Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Returned Data

Data [0] = input byte : 0 = audio input 1 ; ... ; 3 = audio input 4

Data [1] = byte representing the linked source

byte value	source
0	data on BNC's
1	Component video
2	RGB Video
3	RG _s B Video
4	PC
5	Video
6	Video Vs
7	Video R
8	Video G
9	Video B
10	Video Lum
11	Video Chr
12	Video 2
13	S-Video1
14	S-Video2
15	S-Video3
16	S-Video4
17	DVI
18	SDI
19	iQ PC

3.4.6 Volume, Write

Description

Sets the volume level.

Command

Command [0]	\x20
Command [1]	\x07

Data

Data [0] = volume level byte

3.4.7 Volume, Read

Description

Reads the volume level.

Command

Command [0]	\x21
Command [1]	\x07

Returned Data

Data [0] = volume level byte

3.4.8 Minimum/Maximum Volume, Read**Description**

Reads the volume min/max values.

Command

read minimum

Command [0]	\x26
Command [1]	\x07

Command

read maximum

Command [0]	\x27
Command [1]	\x07

Returned Data

Data [0] = byte representing the min/max volume level

3.4.9 Volume, Increment

Description

Increments the volume level by one.

Command

Command [0]	\x22
Command [1]	\x07

3.4.10 Volume, Decrement**Description**

Decrements the volume level by one.

Command

Command [0]	\x23
Command [1]	\x07

3.4.11 Bass, Write

Description

Sets the Bass level.

Command

Command [0]	\x20
Command [1]	\x08

Data

Data [0] = Bass level byte

3.4.12 Bass, Read**Description**

Reads the Bass level.

Command

Command [0]	\x21
Command [1]	\x08

Returned Data

Data [0] = Bass level byte

3.4.13 Bass, Increment

Description

Increments the Bass level by one.

Command

Command [0]	\x22
Command [1]	\x08

3.4.14 Bass, Decrement**Description**

Decrements the Bass level by one.

Command

Command [0]	\x23
Command [1]	\x08

3.4.15 Minimum/Maximum Bass, Read

Description

Reads the Bass min/max values.

Command

read minimum

Command [0]	\x26
Command [1]	\x08

Command

read maximum

Command [0]	\x27
Command [1]	\x08

Returned Data

Data [0] = Bass level byte

3.4.16 Treble, Write**Description**

Sets the Treble level.

Command

Command [0]	\x20
Command [1]	\x09

Data

Data [0] = Treble level byte

3.4.17 Treble, Read

Description

Reads the Treble level.

Command

Command [0]	\x21
Command [1]	\x09

Returned Data

Data [0] = Treble level byte

3.4.18 Treble, Increment**Description**

Increments the Treble level by one.

Command

Command [0]	\x22
Command [1]	\x09

3.4.19 Treble, Decrement

Description

Decrements the Treble level by one.

Command

Command [0]	\x23
Command [1]	\x09

3.4.20 Minimum/Maximum Treble, Read**Description**

Reads the Treble min/max values.

Command

read minimum

Command [0]	\x26
Command [1]	\x09

Command

read maximum

Command [0]	\x27
Command [1]	\x09

Returned Data

Data [0] = Treble level byte

3.4.21 Balance, Write

Description

Sets the Balance level.

Command

Command [0]	\x20
Command [1]	\x0A

Data

Data [0] = Balance level signed byte

3.4.22 Balance, Read**Description**

Reads the Balance level.

Command

Command [0]	\x21
Command [1]	\x0A

Returned Data

Data [0] = Balance level signed byte

3.4.23 Balance, Increment

Description

Increments the Balance level by one.

Command

Command [0]	\x22
Command [1]	\x0A

3.4.24 Balance, Decrement**Description**

Decrements the Balance level by one.

Command

Command [0]	\x23
Command [1]	\x0A

3.4.25 Minimum/Maximum Balance, Read

Description

Reads the Balance min/max values.

Command

read minimum

Command [0]	\x26
Command [1]	\x0A

Command

read maximum

Command [0]	\x27
Command [1]	\x0A

Returned Data

Data [0] = Treble level byte

3.4.26 Mode, Write**Description**

Sets the Mode level.

Command

Command [0]	\x20
Command [1]	\x10

Data

Data [0] = Mode byte: 0 = Stereo ; 1 = Mono

3.4.27 Mode, Read

Description

Reads the Mode level.

Command

Command [0]	\x21
Command [1]	\x10

Returned Data

Data [0] = Mode byte: 0 = Stereo ; 1 = Mono

3.4.28 Mode, Increment**Description**

Increments the Mode level by one.

Command

Command [0]	\x22
Command [1]	\x10

Data

Data [0] = Mode byte: 0 = Stereo ; 1 = Mono

3.4.29 Mode, Decrement

Description

Decrements the Mode level.

Command

Command [0]	\x23
Command [1]	\x10

3.4.30 Minimum/Maximum Mode, Read**Description**

Reads the Mode min/max values.

Command

read minimum

Command [0]	\x26
Command [1]	\x10

Command

read maximum

Command [0]	\x27
Command [1]	\x10

Returned Data

Data [0] = Mode min/max level byte

3.5 Automatic startup, Write

Description

Enables/disables the Automatic Startup.

Command

Command [0]	\x20
Command [1]	\x96

Data

Data [0] = byte type



byte value:

0 = OFF; 1 = ON

Example

Enables the Automatic startup

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x96
Data[0]	\x01
Checksum	\xb8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.6 Automatic startup, Read

Description

Reads whether the Automatic startup is enabled or not

Command

Command [0]	\x21
Command [1]	\x96

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the Automatic startup, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x96
Checksum	\xb8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x96
Data[0]	\x00
Checksum	\xb8
Stop	\xff

3.7 Startup screen, Write

Description

Enables/disables the Startup screen.

Command

Command [0]	\x20
Command [1]	\x99

Data

Data [0] = byte type



byte value:

0 = OFF; 1 = ON

Example

Enables the Startup screen

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x99
Data[0]	\x01
Checksum	\xbb
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.8 Startup screen, Read

Description

Reads whether the Startup screen is enabled or not

Command

Command [0]	\x21
Command [1]	\x99

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the Automatic startup, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x99
Checksum	\xbb
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x99
Data[0]	\x00
Checksum	\xbb
Stop	\xff

3.9 Input balance

Overview

- Input black balance, Increment
- Input black balance, Decrement
- Input black balance, Write
- Input black balance, Read
- Input white balance, Increment
- Input white balance, Decrement
- Input white balance, Write
- Input white balance, Read

3.9.1 Input black balance, Increment

Description

Increments the black input balance for the different color channels

Commands

Black input balance Red

Command [0]	\x22
Command [1]	\x84

Black input balance Green

Command [0]	\x22
Command [1]	\x85

Black input balance Blue

Command [0]	\x22
Command [1]	\x86

3.9.2 Input black balance, Decrement

Description

Decrements the black input balance for the different color channels

Commands

Black input balance Red

Command [0]	\x23
Command [1]	\x84

Black input balance Green

Command [0]	\x23
Command [1]	\x85

Black input balance Blue

Command [0]	\x23
Command [1]	\x86

3.9.3 Input black balance, Write

Description

Writes the black input balance for the different color channels to the projector

Commands

Black input balance Red

Command [0]	\x20
Command [1]	\x84

Black input balance Green

Command [0]	\x20
Command [1]	\x85

Black input balance Blue

Command [0]	\x20
Command [1]	\x86

Data

Data [0] = unsigned byte

3.9.4 Input black balance, Read

Description

Reads the black input balance for the different color channels from the projector

Commands

Black input balance Red

Command [0]	\x21
Command [1]	\x84

Black input balance Green

Command [0]	\x21
Command [1]	\x85

Black input balance Blue

Command [0]	\x21
Command [1]	\x86

Read Data

Data [0] = unsigned byte

Example

Reads the black input balance for Red, being \x10

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x84
Checksum	\xa6
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x84

Receive (Answer)	
Data [0]	\x10
Checksum	\xb6
Stop	\xff

3.9.5 Input white balance, Increment

Description

Increments the white input balance for the different color channels

Commands

White input balance Red

Command [0]	\x22
Command [1]	\x87

White input balance Green

Command [0]	\x22
Command [1]	\x88

White input balance Blue

Command [0]	\x22
Command [1]	\x89

3.9.6 Input white balance, Decrement

Description

Decrements the white input balance for the different color channels

Commands

White input balance Red

Command [0]	\x23
Command [1]	\x87

White input balance Green

Command [0]	\x23
Command [1]	\x88

White input balance Blue

Command [0]	\x23
Command [1]	\x89

3.9.7 Input white balance, Write

Description

Writes the white input balance for the different color channels to the projector

Commands

Black input balance Red

Command [0]	\x20
Command [1]	\x87

Black input balance Green

Command [0]	\x20
Command [1]	\x88

Black input balance Blue

Command [0]	\x20
Command [1]	\x89

Data

Data [0] = unsigned byte

3.9.8 Input white balance, Read

Description

Reads the White input balance for the different color channels from the projector

Commands

White input balance Red

Command [0]	\x21
Command [1]	\x87

White input balance Green

Command [0]	\x21
Command [1]	\x88

White input balance Blue

Command [0]	\x21
Command [1]	\x89

Returned Data

Data [0] = unsigned byte

Example

Reads the White input balance for Red, being \x10

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x86
Checksum	\xa8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x86

3. Advanced Commands

Receive (Awnser)	
Data [0]	\x10
Checksum	\xb8
Stop	\xff

3.10 Autolmage setup, Write

Description

Sets up the Autolmage

Command

Command [0]	\x20
Command [1]	\x90

Data

Unsigned word.see chapter 1. Serial communications Basics, Data words, page 4

Data[0] = unsigned byte (msb)

Data[1] = unsigned byte (lsb)

Parameter	Data[0]	Data[1]	Hex Value
Total Pixels	0000	0001	\x01
Contrast/Brightness	0000	0010	\x02
Phase	0000	0100	\x04
Start pixel/line	0000	1000	\x08
Total pixels + cont/bright	0000	0011	\x03
...			

Example

Set up Autolmage for "Total Pixels"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x90
Data[0]	\x00
Data[1]	\x01
Checksum	\xb2
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.11 Autolmage setup, Read

Description

Reads the Autolmage set up

Command

Command [0]	\x21
Command [1]	\x90

Returned Data

Unsigned word.see chapter 1. Serial communications Basics, Data words, page 4

Data[0] = unsigned byte (msb)

Data[1] = unsigned byte (lsb)

Parameter	Data[0]	Data[1]	Hex Value
Total Pixels	0000	0001	\x01
Contrast/Brightness	0000	0010	\x02
Phase	0000	0100	\x04
Start pixel/line	0000	1000	\x08
Total pixels + cont/bright	0000	0011	\x03
...			

Example

reads the Autolmage set up, being :\x01 = "Total Pixels"

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x90
Checksum	\xB2
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (awnser)	
Start	\xfe
Projector address	\x01

Receive (answer)	
Command[0]	\x21
Command[1]	\x90
Data[0]	\x00
Data[1]	\x01
Checksum	\xb3
Stop	\xff

3.12 Automatic Gain Control, write

Description

Enables/disables the Automatic Gain Control.

Command

Command [0]	\x20
Command [1]	\x9b

Data

Data [0] = byte type



byte value:

0 = OFF; 1 = ON

Example

Enables the AGC

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x9b
Data[0]	\x01
Checksum	\xbd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.13 Automatic Gain Control, Read

Description

Reads whether the AGC is enabled or not

Command

Command [0]	\x21
Command [1]	\x9b

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the AGC setting, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9b
Checksum	\xbd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9b
Data[0]	\x00
Checksum	\xbd
Stop	\xff

3.14 Manual Gain Control value, Write

Description

Sets the manual gain control value.

Command

Command [0]	\x20
Command [1]	\xa2

Data

Data [0] = byte type

Example

Sets the AGC to 10

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\xa2
Data[0]	\x0a
Checksum	\xcd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.15 Manual Gain Control value, Read

Description

Reads the actual gain control value

Command

Command [0]	\x21
Command [1]	\xa2

Returned Data

Data [0] = unsigned byte

Example

Reads the AGC value, being \x0A = 10

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa2
Checksum	\xc4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa2
Data[0]	\x0a
Checksum	\xce
Stop	\xff

3.16 Gain Control, Increment/Decrement

Description

Increments/decrements the Gain Control value by one

Commands

increment:

Command [0]	\x22
Command [1]	\xa2

decrement:

command[0]	\x23
command[1]	\xa2

3.17 Minimum/Maximum AGC value, Read

Description

Reads the minimum/maximum AGC(Automatic Gain Control) value.

Commands

read minimum:

Command [0]	\x26
Command [1]	\xa2

read maximum:

Command[0]	\x27
Command[1]	\xa2

Returned Data

Data [0] = min/max value

3.18 Automatic Gain Control interval, Write

Description

Sets the AGC to short or long.

Command

Command [0]	\x20
Command [1]	\x9c

Data

Data [0] = byte type



byte value:

0 = short ; 1 = long

Example

Sets the AGC interval to “short”

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x9c
Data[0]	\x00
Checksum	\xbd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.19 Automatic Gain Control Interval, Read

Description

Reads the AGC interval (short or long)

Command

Command [0]	\x21
Command [1]	\x9c

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = short ; \x01 = long

Example

Reads the Automatic startup, being \x00 = short

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9c
Checksum	\xbe
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x9c
Data[0]	\x00
Checksum	\xbe
Stop	\xff

3.20 Data input format, Increment/Decrement

Description

Increments/decrements the Data input format setting.

Commands

increment:

Command [0]	\x22
Command [1]	\xa4

decrement:

command[0]	\x23
command[1]	\xa4

3.21 Data input format, write

Description

Sets the data input format.

Command

Command [0]	\x20
Command [1]	\xa4

Data

Data [0] = byte type

Data format	byte value
RGB	0
CrYCb	1
HDTV(CrYCb)	2

3.22 Data input format, Read

Description

Reads the actual data input format setting.

Command

Command [0]	\x21
Command [1]	\xa4

Returned Data

Data [0] = byte type

Data format	byte value
RGB	0
CrYCb	1
HDTV(CrYCb)	2

3.23 Image files

Overview

- Delete File(s)
- Copy File
- Rename File
- Move File
- Image files settings, Write
- Image files settings, read
- Image files settings,Increment
- Image files settings, Decrement
- Read Minimum/Maximum Image files settings
- VCO, Increment
- VCO, decrement
- VCO,write
- VCO, Read
- Minimum VCO, Read
- Maximum VCO, Read
- Charge pump current, Increment/Decrement
- charge pump current, Write
- charge pump current , Read
- Minimum/Maximum charge pump current, Read
- Clamp position, Increment/Decrement
- Clamp position, Write
- Clamp position, Read
- Minimum/Maximum clamp position, Read
- Comb filter, Increment/Decrement
- comb filter, Write
- Comb filter, Read
- Minimum/Maximum comb filter, Read
- Horizontal sync polarity, Increment/Decrement
- Minimum/Maximum Horizontal sync polarity, Read
- Horizontal sync polarity, Read
- Horizontal sync polarity, Write
- Sync locking, Increment/Decrement
- Minimum/Maximum Horizontal Sync locking, Read
- Sync locking, Read
- Sync locking, Write

3.23.1 Delete File(s)

Description

This command deletes a list of image files from the projector.

Wildcards can be used to specify the filenames.see chapter 1. Serial communications Basics, Syntax, page 8

Command

Command [0]	\xc1
-------------	------

Send Data

strFilename1

...

strFilenameN

3.23.2 Copy File

Description

This command copies an image file (source file) to another file (destination file).



The destination file must always be a custom file. **Syntax, page 8**

Command

Command [0]	\xc2
-------------	------

Send Data

strFilenameFrom

strFilenameTo



strFilenameFrom and strFilenameTo are strings of the C-string type. **Syntax, page 8**

3.23.3 Rename File

Description

This command renames an image file (source file) to another file (destination file).



The source file and the destination file must always be custom files.see Syntax, page 8

Command

Command [0]	\xc3
-------------	------

Send Data

strFilenameFrom

strFilenameTo



strFilenameFrom and strFilenameTo are strings of the C-string type.see Syntax, page 8

3.23.4 Move File

Description

This command moves an image file (source file) to another file (destination file).

When moving a file from a location, this location is not deleted and can be used to store another new file.



The source file and the destination file must always be custom files. **Syntax, page 8**

Command

Command [0]	\xc4
-------------	------

Send Data

strFilenameFrom

strFilenameTo



strFilenameFrom and strFilenameTo are strings of the C-string type. **Syntax, page 8**

3.23.5 Image files settings, Write

Description

These commands set the image files characteristics

Commands

write total lines:

Command [0]	\x20
Command [1]	\x58

write active lines

Command [0]	\x20
Command [1]	\x59

write line start

Command [0]	\x20
Command [1]	\x5a

write period

Command [0]	\x20
Command [1]	\x5b

write total pixels

Command [0]	\x20
Command [1]	\x5c

write active pixels

Command [0]	\x20
Command [1]	\x5d

write pixel start

Command [0]	\x20
Command [1]	\x5e

write clamp width

Command [0]	\x20
Command [1]	\x68

Data

Commands	Data type
total lines	unsigned word (2 bytes)
active lines	unsigned word (2 bytes)
line start	unsigned word (2 bytes)
period	unsigned word (2 bytes)
total pixels	unsigned word (2 bytes)

Commands	Data type
active pixels	unsigned word (2 bytes)
pixel start	unsigned word (2 bytes)
clamp width	unsigned byte

3.23.6 Image files settings, read

Description

These commands reads the image files characteristics

Commands

Read total lines:

Command [0]	\x21
Command [1]	\x58

Read active lines

Command [0]	\x21
Command [1]	\x59

Read line start

Command [0]	\x21
Command [1]	\x5a

Read period

Command [0]	\x21
Command [1]	\x5b

Read total pixels

Command [0]	\x21
Command [1]	\x5c

Read active pixels

Command [0]	\x21
Command [1]	\x5d

Read pixel start

Command [0]	\x21
Command [1]	\x5e

Read clamp width

Command [0]	\x21
Command [1]	\x68

Returned Data

Commands	Data type
total lines	unsigned word (2 bytes)
active lines	unsigned word (2 bytes)
line start	unsigned word (2 bytes)
period	unsigned word (2 bytes)
total pixels	unsigned word (2 bytes)

Commands	Data type
active pixels	unsigned word (2 bytes)
pixel start	unsigned word (2 bytes)
clamp width	unsigned byte

3.23.7 Image files settings, Increment

Description

These commands set the image files characteristics

Commands

Increment total lines:

Command [0]	\x22
Command [1]	\x58

Increment active lines

Command [0]	\x22
Command [1]	\x59

Increment line start

Command [0]	\x22
Command [1]	\x5a

Increment period

Command [0]	\x22
Command [1]	\x5b

Increment total pixels

Command [0]	\x22
Command [1]	\x5c

Increment active pixels

Command [0]	\x22
Command [1]	\x5d

Increment pixel start

Command [0]	\x22
Command [1]	\x5e

Increment clamp width

Command [0]	\x22
Command [1]	\x68

3.23.8 Image files settings, Decrement

Description

These commands set the image files characteristics

Commands

decrement total lines:

Command [0]	\x23
Command [1]	\x58

decrement active lines

Command [0]	\x23
Command [1]	\x59

decrement line start

Command [0]	\x23
Command [1]	\x5a

decrement period

Command [0]	\x23
Command [1]	\x5b

decrement total pixels

Command [0]	\x23
Command [1]	\x5c

decrement active pixels

Command [0]	\x23
Command [1]	\x5d

decrement pixel start

Command [0]	\x23
Command [1]	\x5e

decrement clamp width

Command [0]	\x23
Command [1]	\x68

3.23.9 Read Minimum/Maximum Image files settings

Description

These commands read the min/max values of the image files settings

Commands

minimum total lines:

Command [0]	\x26
Command [1]	\x58

maximum total lines

Command [0]	\x27
Command [1]	\x58

minimum active lines

Command [0]	\x26
Command [1]	\x59

maximum active lines

Command [0]	\x27
Command [1]	\x59

minimum line start

Command[0]	\x26
Command[1]	\x5a

maximum line start

Command[0]	\x27
Command[1]	\x5a

Minimum period

Command [0]	\x26
Command [1]	\x5b

maximum period

Command [0]	\x27
Command [1]	\x5b

minimum total pixels

Command [0]	\x26
Command [1]	\x5c

maximum total pixels

Command [0]	\x27
Command [1]	\x5c

minimum active pixels

Command [0]	\x26
Command [1]	\x5d

maximum active pixels

Command [0]	\x27
Command [1]	\x5d

minimum pixel start

Command [0]	\x26
Command [1]	\x5e

maximum pixel start

Command [0]	\x27
Command [1]	\x5e

minimum clamp width

Command [0]	\x26
Command [1]	\x68

maximum clamp width

Command [0]	\x27
Command [1]	\x68

3.23.10VCO, Increment



VCO

The Voltage Controlled Oscillator is used in a Phase Locked Loop which allows to synchronise the data pocessing with the incoming source data.

Description

Increments the VCO by one

Command

Command [0]	\x22
Command [1]	\xa8

3.23.11 VCO, decrement**VCO**

The Voltage Controlled Oscillator is used in a Phase Locked Loop which allows to synchronise the data pocessing with the incoming source data.

Description

Decrements the VCO by one.

Command

Command [0]	\x23
Command [1]	\xa8

3.23.12 VCO,write

Description

Writes a new VCO value to the projector

Command

Command [0]	\x20
Command [1]	\xa8

Data

Data [0] = VCO value



Data[0] = unsigned byte

The range can be found with the “read max/min” commands:

range min: Minimum VCO, Read, page 250

range max :Maximum VCO, Read, page 251

3.23.13 VCO, Read**Description**

Reads the actual VCO value of the projector

Command

Command [0]	\x21
Command [1]	\xa8

Returned Data

Data [0] = VCO value



data type = unsigned byte

Example

Reads the actual VCO value , the awnser being \x00

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa8
Checksum	\xca
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (Answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa7
Data [0]	\x00
Checksum	\xc9
Stop	\xff

3.23.14 Minimum VCO, Read

Description

Reads the minimum (range) VCO value of the projector

Command

Command [0]	\x26
Command [1]	\xa8

Returned Data

Data [0] = minimum VCO value

3.23.15 Maximum VCO, Read**Description**

Reads the Maximum (range) VCO value of the projector

Command

Command [0]	\x27
Command [1]	\xa8

Returned Data

Data [0] = Maximum VCO value

3.23.16 Charge pump current, Increment/Decrement

Description

Increments/decrements the charge pump current by one

Commands

increment:

Command [0]	\x22
Command [1]	\x9d

decrement:

command[0]	\x23
command[1]	\x9d

3.23.17 charge pump current, Write**Description**

Sets the charge pump current for the VCO

Command

Command [0]	\x20
Command [1]	\x9d

Data

Data [0] = byte type

3.23.18charge pump current , Read

Description

Reads the charge pump current

Command

Command [0]	\x21
Command [1]	\x9d

Returned Data

Data [0] = unsigned byte

3.23.19 Minimum/Maximum charge pump current, Read**Description**

Reads the minimum/max charge pump current for the VCO

Commands

read minimum:

Command [0]	\x26
Command [1]	\x9d

read maximum:

Command[0]	\x27
Command[1]	\x9d

Returned Data

Data [0] = minimum VCO value

3.23.20 Clamp position, Increment/Decrement

Description

Increments/decrements the Clamp position by one

Commands

increment:

Command [0]	\x22
Command [1]	\x9e

decrement:

command[0]	\x23
command[1]	\x9e

3.23.21 Clamp position, Write**Description**

Sets the clamp position.

Command

Command [0]	\x20
Command [1]	\x9e

Data

Data [0] = byte type

3.23.22 Clamp position, Read

Description

Reads the clamp position

Command

Command [0]	\x21
Command [1]	\x9e

Returned Data

Data [0] = unsigned byte

3.23.23 Minimum/Maximum clamp position, Read**Description**

Reads the minimum/max clamp position

Commands

read minimum:

Command [0]	\x26
Command [1]	\x9e

read maximum:

Command[0]	\x27
Command[1]	\x9e

Returned Data

Data [0] = min/max value

3.23.24 Comb filter, Increment/Decrement

Description

Increments/decrements the Comb filter setting (on/off) by one

Commands

increment:

Command [0]	\x22
Command [1]	\xa0

decrement:

command[0]	\x23
command[1]	\xa0

3.23.25comb filter, Write**Description**

Enables/disables the comb filter

Command

Command [0]	\x20
Command [1]	\xa0

Data

Data [0] = byte type

**byte value:****0 = OFF; 1 = ON****Example**

Enables the comb filter

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\xa0
Data[0]	\x00
Checksum	\xc1
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.23.26 Comb filter, Read**Description**

Reads whether the comb filter is enabled or not

Command

Command [0]	\x21
Command [1]	\xa0

Returned Data

Data [0] = unsigned byte



byte value:

\x00 = OFF ; \x01 = ON

Example

Reads the comb filter, being \x00 = OFF

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa0
Checksum	\xc2
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\xa0
Data[0]	\x00
Checksum	\xc2
Stop	\xff

3.23.27 Minimum/Maximum comb filter, Read**Description**

Reads the minimum/max comb filter

Commands

read minimum:

Command [0]	\x26
Command [1]	\xa0

read maximum:

Command[0]	\x27
Command[1]	\xa0

Returned Data

Data [0] = min/max value

3.23.28 Horizontal sync polarity, Increment/Decrement

Description

Increments/decrements the horizontal sync polarity by one

Commands

increment:

Command [0]	\x22
Command [1]	\xa9

decrement:

command[0]	\x23
command[1]	\xa9

3.23.29 Minimum/Maximum Horizontal sync polarity, Read**Description**

Reads the minimum/max Horizontal sync polarity

Commands

read minimum:

Command [0]	\x26
Command [1]	\xa9

read maximum:

Command[0]	\x27
Command[1]	\xa9

Returned Data

Data [0] = min/max value

3.23.30 Horizontal sync polarity, Read

Description

Reads the Horizontal sync polarity setting

Command

Command [0]	\x21
Command [1]	\xa9

Returned Data

Data [0] = byte : 0 = active low ; 1 = active high ; 2 = auto (determined by ADC)

3.23.31 Horizontal sync polarity, Write**Description**

Sets the Horizontal sync polarity setting in the image file.

Command

Command [0]	\x20
Command [1]	\xa9

Data

Data [0] = byte : 0 = active low ; 1 = active high ; 2 = auto (determined by ADC)

3.23.32 Sync locking, Increment/Decrement

Description

Increments/decrements the Sync locking setting by one

Commands

increment:

Command [0]	\x22
Command [1]	\xab

decrement:

command[0]	\x23
command[1]	\xab

3.23.33 Minimum/Maximum Horizontal Sync locking, Read**Description**

Reads the minimum/max Sync locking

Commands

read minimum:

Command [0]	\x26
Command [1]	\xab

read maximum:

Command[0]	\x27
Command[1]	\xab

Returned Data

Data [0] = byte : 0 = slow ; 1 = fast

3.23.34 Sync locking, Read

Description

Reads the Sync locking setting

Command

Command [0]	\x21
Command [1]	\xab

Returned Data

Data [0] = byte : 0 = slow ; 1 = fast

3.23.35 Sync locking, Write**Description**

Sets the Sync locking (fast or slow)

Command

Command [0]	\x20
Command [1]	\xab

Data

Data [0] = byte : 0 = slow ; 1 = fast

3.24 I²C diagnosis, Read

Description

Reads the I²C diagnosis.

Command

Command [0]	\x81
Command [1]	\x01

Sent Data

Data[0] = bySlaveAddr1

Data[1] = bySlaveAddr2

...

Data[N-1] = bySlaveAddrN



bySlaveAddrn = byte representing the address of the module or unit to be diagnosed.

If omitted, all the units are reported.

Unit	Hex address
Motor driver	\x74
Lamp driver	\x78
Video processor	\x96
Fpga backplane1	\xb4
Fpga backplane2	\xb6
Fpga backplane3	\xb8
ADC 9886 layer1	\x98
ADC 9887 layer1	\x9e
ADC 9887 layer2	\x9a
DVI indicators layer1	\x7e
DVI indicators layer2	\x7a
Video decoder	\x42
Video indicators	\x7c

Table 3-290
address overview

Returned Data

Data[0] = strDiagnosis1

Data[1] = strDiagnosis2

...

Data[N-1] = strDiagnosisN

3.25 Serviceable parts history, Read

Description

Reads the history of the serviceable parts.

The serviceable parts are :

- x-cube panels
- analysers
- polarisers
- x-cube
- IR/UV filter
- lightpipe
- fold mirror
- dustfilters kit

Command

Command [0]	\x13
Command [1]	\x01

Returned Data

Data [0] = history String

history string: contains a sequence of substrings separated by a period:

Name:sequencenumber@projectorruntime.Name:sequencenumber@projectorruntime...

Name: name of the part

Sequencenumber: gives the sequence of the part, for example, x-cube sequencenumber = 1, means that it is the first x-cube used in the projector.

Projector runtime: gives the projector runtime at the replacement of the serviceable part



For more info about the serviceable parts refer to the iQ service manual.

3.26 Lamp and power supply history, Read

Description

Reads the history of the lamps and the power supply.

Command

Command [0]	\x81
Command [1]	\x04

Returned Data

For “n/2” errors occurred, following data is returned

Data [1] = projector runtime double word (in hours)

Data [2] = error code word

...

Data [n-1] = projector runtime double word (in hours)

Data [n] = error code word

error code can be one of the following codes:

- 0 : multiple temperature errors
- 2 : ambient overtemperature
- 3 : airflow overtemperature
- 4 : fan error
- 5 : lamp overtemperature
- 6 : Heatsink overtemperature
- 256 : lamp1 error
- 257 : lamp2 error
- 258 : lamp 1&2 error



For more info about the serviceable parts refer to the iQ service manual.

3.27 Serviceable parts erase history

Description

Erases the history of the serviceable parts.

The serviceable parts are :

- x-cube panels
- analysers
- polarisers
- x-cube
- PBS
- IR/UV filter
- lightpipe
- fold mirror
- dustfilters kit

Command

Command [0]	\x13
Command [1]	\x03



For more info about the serviceable parts refer to the iQ service manual.

3.28 Dirty dust filters, Read

Description

Reads the history of dirty dust filters i.e. the elapsed time after insufficient airflow has been detected.

Command

Command [0]	\x13
Command [1]	\x02

Returned Data

Data [0] = double word value : this double word gives the number of hours that the LCD panels have been used with dirty dust filters



For more info about the serviceable parts refer to the iQ service manual.

3.29 Power supply error, Read

Description

Reads the error codes related to the power supply.

possible errors:

- multiple temperature error
- airflow overtemperature
- fan error
- lamp overtemperature
- heatsink overtemperature

Command

Command [0]	\x81
Command [1]	\x02

Returned Data

Data [0] = error code word : one word can be one of following codes:

- 0 : multiple temperature errors
- 2: ambient overtemperature
- 3: airflow overtemperature
- 4: fan error
- 5: lamp overtemperature
- 6: heatsink overtemperature
- 7: no error



For more info about the serviceable parts refer to the iQ service manual.

3.30 Lamp error, Read

Description

Reads the error codes related to the Lamp.

Command

Command [0]	\x81
Command [1]	\x03

Returned Data

Data [0] = error code byte: one byte, can be one of the following codes:

- 0 : no error
- 1: error on lamp 1
- 2: error on lamp 2
- 3: error on both lamps



For more info about the serviceable parts refer to the iQ service manual.

3.31 Panel size, Read

Description

Reads the size of the LCD panels

Command

Command [0]	\xf0
Command [1]	\x01

Returned Data

Data [0]...Data [3] = wpixels = unsigned word, see chapter 1. Serial communications Basics, Data words, page 4, representing the number of pixels in one line.

Data [4]...Data [7] = wlines = unsigned word (2bytes), representing the number of lines.

for xga resolution panels : wpixels = 1024 ; wlines = 768 lines

3.32 Logo status, Read

Description

Reads the status of the logo.

Command

Command [0]	\xf1
Command [1]	\x01

Returned Data

Data [0] =byStatus = 1 byte representing the status of the logo

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
-	-	-	-	-	saving	valid	fullscreen active

Table 3-299
byStatus byte description

3.33 Take screenshot (Logo)

Description

Takes a screenshot of the projected image for the logo, the logo image information is stored in an SDRAM.

Command

Command [0]	\xf1
Command [1]	\x86

Example

Takes a screenshot

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x86
Checksum	\x78
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3.34 Save screenshot (Logo)

Description

Saves the previously taken screenshot (see the “take screenshot”command, Take screenshot (Logo), page 281)from the SDRAM to a flash memory.

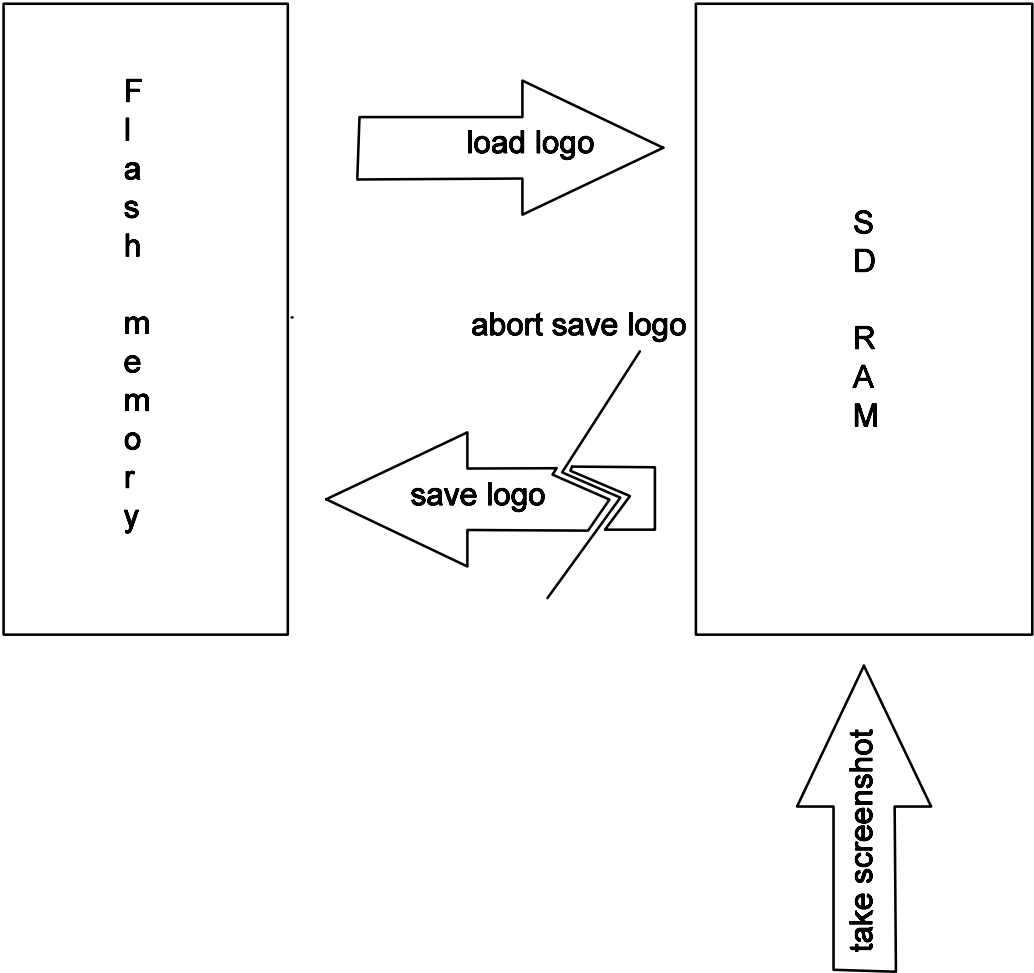


Image 3-1

Command

Command [0]	\xf1
Command [1]	\x87

3.35 Abort saving screenshot (Logo)

Description

Aborts saving the previously taken screenshot.

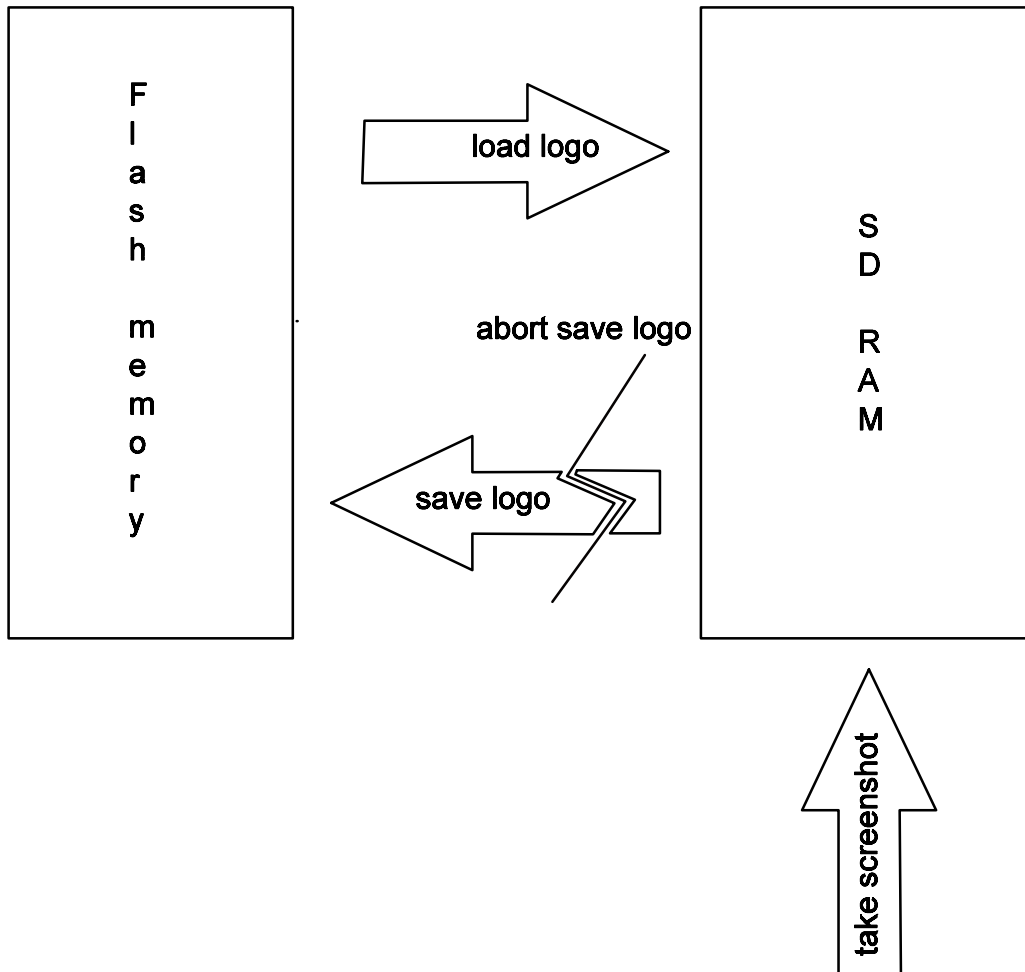


Image 3-2

Command

Command [0]	\xf1
Command [1]	\x88

3.36 Load logo

Description

Loads the logo (present in the flash memory) in the SDRAM.

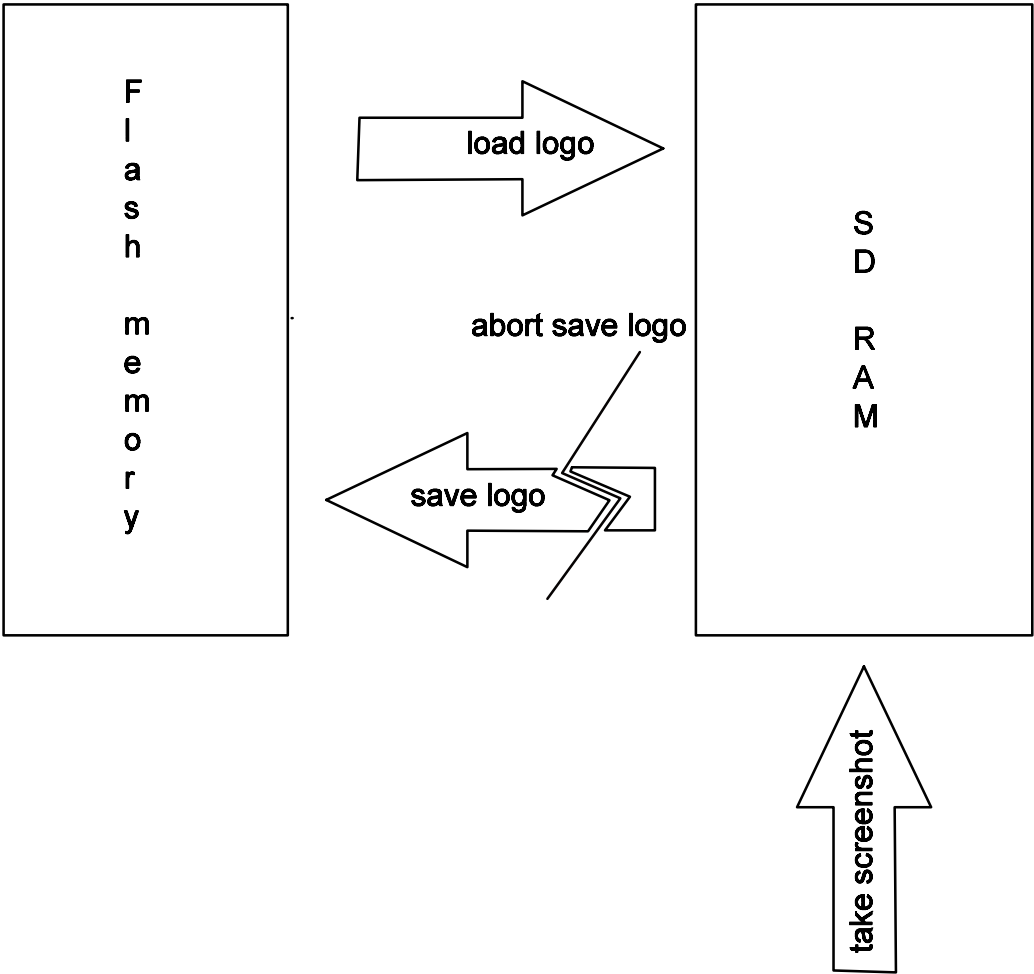


Image 3-3

Command

Command [0]	\xf1
Command [1]	\x88

3.37 iQ PC

Overview

- iQ PC commands
- iQ PC Projector ON state, Write
- iQ PC Projector Standby state, Write
- iQ PC state, Write
- iQ PC reboot
- iQ PC Projector ON state, Read
- iQ PC Projector Standby state, Read
- iQ PC state, Read
- iQ PC Projector ON state, Increment/Decrement
- iQ PC Projector Standby state, Increment/Decrement
- iQ PC state, Increment/Decrement
- Min/Max iQ PC Projector ON state, Read
- Min/Max iQ PC Projector standby state, Read
- Min/Max iQ PC state, Read

3.37.1 iQ PC commands

iQ PC

The iQ PC commands can only be used in case of a iQ Pro network projector

3.37.2 iQ PC Projector ON state, Write

Description

Writes the iQ PC Projector ON state setting (ON/OFF).



The iQ PC projector ON state determines in which state the iQ PC will be switched when switching ON the projector.

Command

Command [0]	\x20
Command [1]	\xad
Command [2]	\x00

Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.3 iQ PC Projector Standby state, Write

Description

Writes the iQ PC Projector Standby state setting (ON/OFF).



The iQ PC projector Standby state determines in which state the iQ PC will be switched when switching the projector to standby.

Command

Command [0]	\x20
Command [1]	\xad
Command [2]	\x01

Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.4 iQ PC state, Write**Description**

Switches the iQ PC ON or OFF.

Command

Command [0]	\x20
Command [1]	\xad
Command [2]	\x02

Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.5 iQ PC reboot

Description

Reboots the iQ PC.

Command

Command [0]	\x20
Command [1]	\xad
Command [2]	\x03

3.37.6 iQ PC Projector ON state, Read

Description

Reads the iQ PC Projector ON state setting (ON/OFF).



The iQ PC projector ON state determines in which state the iQ PC will be switched when switching ON the projector.

Command

Command [0]	\x21
Command [1]	\xad
Command [2]	\x00

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.7 iQ PC Projector Standby state, Read

Description

Reads the iQ PC Projector Standby state setting (ON/OFF).



The iQ PC projector Standby state determines in which state the iQ PC will be switched when switching the projector to standby.

Command

Command [0]	\x21
Command [1]	\xad
Command [2]	\x01

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.8 iQ PC state, Read**Description**

Reads the iQ PC state (ON/OFF).

Command

Command [0]	\x21
Command [1]	\xad
Command [2]	\x02

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.9 iQ PC Projector ON state, Increment/Decrement

Description

Increment/Decrement the iQ PC Projector ON state setting by one (ON/OFF).



The iQ PC projector ON state determines in which state the iQ PC will be switched when switching ON the projector.

Command

increment:

Command [0]	\x22
Command [1]	\xad
Command [2]	\x00

Command

decrement:

Command [0]	\x23
Command [1]	\xad
Command [2]	\x00

3.37.10iQ PC Projector Standby state, Increment/Decrement**Description**

Increment/Decrement the iQ PC Projector Standby state setting by one (ON/OFF).



The iQ PC projector Standby state determines in which state the iQ PC will be switched when switching the projector to standby.

Command

increment:

Command [0]	\x22
Command [1]	\xad
Command [2]	\x01

Command

decrement:

Command [0]	\x23
Command [1]	\xad
Command [2]	\x01

3.37.11 iQ PC state, Increment/Decrement

Description

Increment/Decrement the iQ PC state setting by one (ON/OFF).

Command

increment:

Command [0]	\x22
Command [1]	\xad
Command [2]	\x02

Command

decrement:

Command [0]	\x23
Command [1]	\xad
Command [2]	\x02

3.37.12Min/Max iQ PC Projector ON state, Read**Description**

Reads the minimum/maximum iQ PC Projector ON state setting (ON/OFF).



The iQ PC projector ON state determines in which state the iQ PC will be switched when switching ON the projector.

Command

minimum:

Command [0]	\x26
Command [1]	\xad
Command [2]	\x00

Command

maximum:

Command [0]	\x27
Command [1]	\xad
Command [2]	\x00

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.13 Min/Max iQ PC Projector standby state, Read

Description

Reads the minimum/maximum iQ PC Projector standby state setting (ON/OFF).



The iQ PC projector standby state determines in which state the iQ PC will be switched when switching the projector to standby.

Command

minimum:

Command [0]	\x26
Command [1]	\xad
Command [2]	\x01

Command

maximum:

Command [0]	\x27
Command [1]	\xad
Command [2]	\x02

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

3.37.14 Min/Max iQ PC state, Read**Description**

Reads the minimum/maximum iQ PC state setting (ON/OFF).

Command

minimum:

Command [0]	\x26
Command [1]	\xad
Command [2]	\x02

Command

maximum:

Command [0]	\x27
Command [1]	\xad
Command [2]	\x02

Returned Data

Data [0] = word : 0 = iQ PC OFF ; 1 = iQ PC ON

A. ADDITIONAL (DUPLICATE) COMMANDS

A.1 Contrast, Increment

Description

Increments the contrast by one.

Command

Command [0]	\x01
-------------	------

Example

Increment contrast of a projector with address \x01 by one.

A.2 Contrast, Decrement

Description

Decrements the contrast by one.

Command

Command [0]	\x02
-------------	------

A.3 Brightness, Increment

Description

Increments the Brightness by one.

Command

Command [0]	\x03
-------------	------

A.4 Brightness, Decrement

Description

Decrements the Brightness by one.

Command

Command [0]	\x04
-------------	------

A.5 Saturation, Increment

Description

Increments the saturation by one.

Command

Command [0]	\x05
-------------	------

A.6 Saturation, Decrement

Description

Decrements the Saturation by one.

Command

Command [0]	\x06
-------------	------

A.7 Tint, Increment

Description

Increments the Tint by one.

Command

Command [0]	\x07
-------------	------

A.8 Tint, Decrement

Description

Decrements the Tint by one.

Command

Command [0]	\x08
-------------	------

A.9 Sharpness, Increment

Description

Increments the Sharpness by one.

Command

Command [0]	\x09
-------------	------

A.10 Sharpness, Decrement

Description

Decrements the Sharpness by one.

Command

Command [0]	\x0a
-------------	------

A.11 Phase, Increment

Description

Increments the Phase by one.

Command

Command [0]	\x0b
-------------	------

A.12 Phase, Decrement

Description

Decrements the Phase by one.

Command

Command [0]	\x0c
-------------	------

B. RCU COMMANDS

B.1 Overview

Local keypad

Button	Hex Code
Lens	\x77
Cursor up	\x50
Cursor down	\x51
Cursor right	\x56
Cursor left	\x55
BACK	\x53
ENTER	\x57
Standby	\x0c
Source	\x9c

RCU

Button	Hex code
0	\x00
1	\x01
2	\x02
3	\x03
4	\x04
5	\x05
6	\x06
7	\x07
8	\x08
9	\x09
lens focus "+"	\x0a
lens focus "-"	\x0b
Standby	\x0c
Mute	\x0d
Text	\x0f
Volume "+"	\x10
Volume "-"	\x11
Brightness "+"	\x12
Brightness "-"	\x13
Color "+"	\x14
Color "-"	\x15
Bass "+"	\x16
Bass "-"	\x17
Treble "+"	\x18

Button	Hex code
Treble “-”	\x19
Balance	\x1a
Balance	\x1b
Contrast	\x1c
Contrast	\x1d
Tint “-”	\x1f
Tint “+”	\x27
Lens Zoom “+”	\x2b
Lens Zoom “-”	\x2c
Pause	\x30
Swiff	\x3e
Phase “+”	\x48
Phase “-”	\x49
Sharpness “+”	\x4d
Sharpness “-”	\x4e
↑	\x50
↓	\x51
Menu	\x52
Back	\x53
Address	\x54
←	\x55
→	\x56
Enter	\x57
PiP	\x58
Freeze	\x5d
PiP adj	\x68
AutoImage	\x69
F1	\x6b
F2	\x6c
F3	\x6d
F4	\x6e
F5	\x6f
Lens shift ↑	\x70
Lens shift ↓	\x71
Lens Adj	\x77
Logo	\x78

B. RCU commands

Button	Hex code
Digital Zoom out	\x7d
Digital Zoom in	\x7e

GLOSSARY

ANSI

American National standards Institute

custom file

File created by the user and stored in non-volatile read write memory

lsb

The **less significant byte**, is the byte with the smallest weight (value).

msb

The **most significant byte**, is the byte with the greatest weight (value).

standard file

Predefined file stored in read-only memory

VCO

The Voltage Controlled Oscillator is used in a Phase Locked Loop which allows to synchronise the data pocessing with the incoming source data.

–247

INDEX

A

- Active Image files list 97
 - read active image files list 97
- Add window 149
 - read addable sources list 149
- Advanced commands 68, 70, 82, 114, 128–137, 139, 141, 143–145, 147–150, 152–154, 156–172, 175–178, 204–212, 214–217, 219–220, 222, 224–238, 240, 242–244, 246–272, 279–284
 - Abort saving screenshot (Logo) 283
 - AGC 222, 224
 - AGC increment/decrement 226
 - AGC interval 228
 - Audio input selection read 177–178
 - Audio read, Mute 176
 - Audio write Mute 175
 - Autoimage execute 114
 - Automatic startup 204
 - Charge pump current increment/decrement 252
 - Clamp position increment/decrement 256
 - Comb filter increment/decrement 260
 - Copy image file 235
 - Data input format increment/decrement 230
 - decrement 243
 - Image files 243
 - delete image files(s) 234
 - digital zoom 157
 - Digital zoom 161–172
 - Decrement window size 170
 - Decrement window X position 171
 - Decrement window Y position 172
 - Increment window size 167
 - Increment window X position 168
 - Increment window Y position 169
 - read window size 164
 - Read window X position 165
 - read window Y position 166
 - write window size 161
 - write window X position 162
 - write window Y position 163
 - Horizontal sync polarity, write 267
 - image files 233
 - Increment 242
 - Image files 242
 - Input balance 208
 - Input black balance Decrement 210
 - Input black balance increment 209
 - Input black balance Read 212
 - Input black balance write 211
 - Input sync polarity increment/decrement 264
 - Input white balance Decrement 215
 - Input white balance increment 214
 - Input White balance Read 217
 - Input white balance write 216
 - lamp commands 128
 - lamp History read 130
 - lamp runtime reset, write 129
 - Load logo 284
 - Min/Max 244
 - Image files 244
 - move image file 237
 - PiP (Picture in Picture) 131
 - PiP add window 150
 - PiP current Layout, Read 139
 - PiP Layout , Read 135
 - PiP Layout List, Read 137
 - PiP list active sources 154
 - PiP Loop focus 132
 - PiP Priority read 153
 - PiP Priority Write 152
 - PiP Read Focus 133
 - PiP read last active window type 156
 - PiP remove Layout, Write 147
 - PiP remove window 148
 - PiP rename Layout 145
 - PiP save Layout 143
 - PiP save Layout as 144
 - PiP select Layout, Write 141
 - PiP Write Focus 134
 - PiP Write layout 136
 - Read 240, 249
 - Image files 240
 - VCO 249
 - read addable sources list 149
 - Read Aspect Ratio 82
 - Read AutolImage setup 220
 - Read Automatic gain control Interval 229
 - Read Automatic startup 205
 - Read charge pump current 254
 - Read clamp position 258
 - Read comb filter 262
 - Read data input format 232
 - Read Horizontal sync polarity 266
 - Read I²C diagnosis 272
 - Read logo status 280
 - Read manual gain control value 225
 - read Maximum 251
 - ContrastVCO 251
 - read min/max AGC value 227
 - read min/max charge pump current 255
 - read min/max clamp position 259
 - read min/max comb filter 263
 - read min/max Horizontal sync polarity 265
 - read min/max Sync locking 269
 - read min/max window size 158
 - read min/max window X position 159
 - read min/max window Y position 160
 - read minimum 250
 - VCO 250
 - Read Panel size 279
 - read scanned inputs 70
 - Read Startup screen 207
 - Read Sync locking 270
 - rename image file 236
 - Save screenshot (Logo) 282
 - Source selection 68
 - Startup screen 206
 - Sync locking, increment/decrement 268
 - Sync locking, write 271
 - Take screenshot (Logo) 281
 - VCO decrement 247
 - VCO increment 246
 - write 248
 - VCO 248
 - Write 238
 - Image files 238
 - write AutolImage setup 219
 - Write charge pump current 253
 - Write clamp position 257
 - Write comb filter 261
 - Write data input format 231
- Advanced Commands 127
- AGC 222–226, 228–229
 - Automatic gain control 222–223
 - Automatic gain control Interval 229
 - increment/decrement 226
 - Manual gain control value 225
 - Write Automatic gain control interval 228
 - Write manual gain control 224
- AGC value 227
 - read minimum/max 227
- Aspect ratio 81
 - write Aspect ratio 81
- Aspect Ratio 82
 - Read Aspect Ratio 82

Audio 173–203
 Audio commands 173
 Balance, Decrement 197
 Balance, Increment 196
 Balance, Read 195
 Balance, read min/max 198
 Balance, write 194
 Bass, Decrement 187
 Bass, Increment 186
 Bass, Read 185
 Bass, read min/max 188
 Bass, write 184
 features 174
 input selection read 177–178
 Mode, Decrement 202
 Mode, Increment 201
 Mode, read min/max 203
 Mode, write 199
 Mode, Read 200
 Mute read 176
 Mute write 175
 Treble, Decrement 192
 Treble, Increment 191
 Treble, Read 190
 Treble, read min/max 193
 Treble, write 189
 volume, Decrement 183
 volume, Increment 182
 volume, read 180
 volume, read min/max 181
 volume, write 179
Autoimage 114
 Autoimage execute 114
Autolmage 219–220
 Read Autolmage setup 220
 write Autolmage setup 219

B

Background 79–80
 Read Background 80
 write Background 79
Balance, Decrement 197
Balance, Increment 196
Balance, Read 195
Balance, read min/max 198
Balance, write 194
Basic commands 13–21, 23–24, 26, 30–66, 71–81, 83–88, 90–105, 107, 109, 111–113, 119, 121, 123–126, 223, 302–313
 Blanking 119, 121, 123–126
 Maximum, read 126
 Minimum, read 125
 read 121
 Brightness decrement 38, 305
 Brightness Increment 37, 304
 Color (Red/Blue) temperature Decrement 100
 Color (Red/Blue) temperature increment 99
 Color temperature 98
 Color temperature Read 103
 Color temperature Red/Bleu 101
 Color temperature Red/Bleu Read 102
 Contrast decrement 32, 303
 Contrast increment 31, 302
 Filmmode detection 112–113
 Filmmode detection increment/decrement 111
 Gamma decrement 56
 Gamma increment 55
 Identification 13–17
 Read device type 13
 Read Projector's runtime 17
 Read Projector's Serial number 16
 Read Projector's Software type 14
 Read Projector's Software version 15
 image files 93
 Lamp 92
 Read Lamps Serial number 92

 lamp commands 85
 lamp mode read 87
 lamp mode write 86
 lamp Status read 88
 lamp Warning read 90
 lens commands 26
 Logo ON/OFF 78
 Phase decrement 62, 313
 Phase increment 61, 312
 Picture setting 30
 Read 34, 40, 46, 52, 58, 64
 Brightness 40
 Contrast 34
 Gamma 58
 Phase 64
 Saturation 46
 Tint 52
 read active image files list 97
 Read Automatic gain control 223
 Read Background 80
 Read Freeze 77
 read image file 95
 read image file list 96
 Read Keystone 84
 Read Lamp runtime 91
 read Maximum 36, 42, 48, 54, 60, 66
 Brightness 42
 Contrast 36
 Gamma 60
 Phase 66
 Saturation 48
 Tint 54
 read minimum 35, 41, 47, 53, 59, 65
 Brightness 41
 Contrast 35
 Gamma 59
 Phase 65
 Saturation 47
 Tint 53
 Read orientation 73
 read Projector language 19
 Read Projector's Status 24
 Read shutter 75
 Read Switching Mode 109
 Saturation decrement 44, 307
 saturation increment 43, 306
 scan inputs 71
 Sharpness decrement 311
 Sharpness increment 310
 Standby Timer 105
 Tint decrement 50, 309
 Tint increment 49, 308
 Write 33, 39, 45, 51, 57, 63
 Brightness 39
 Contrast 33
 Gamma 57
 Phase 63
 Saturation 45
 Tint 51
 write Aspect ratio 81
 write Background 79
 write Baudrate 21
 write Freeze 76
 write image file 94
 write Keystone 83
 Write orientation 72
 write Projector address 18
 write Projector language 20
 write Projector ON/OFF 23
 write shutter 74
 Write Standby Timer 104
 Write switching mode 107
Basic Commands 27–29, 67
 Lens Focus 29
 Lens shift 27
 Lens Zoom 28

Menu Exit 67
 Bass, Decrement 187
 Bass, Increment 186
 Bass, Read 185
 Bass, read min/max 188
 Bass, write 184
 Baudrate 21
 write Baudrate 21
 blanking 115
 Brightness 37–42, 304–305
 decrement 38, 305
 increment 37, 304
 read 40
 read Maximum 42
 read minimum 41
 write 39

C

charge pump current 253–255
 read 254
 read minimum/max 255
 Write charge pump current 253
 Charge pump current 252
 increment/decrement 252
 clamp position 257–259
 Read clamp position 258
 read minimum/max 259
 Write clamp position 257
 Clamp position 256
 increment/decrement 256
 Color 98
 Color temperature 98
 Color (Red/Blue) temperature 99–100
 Decrement 100
 increment 99
 Color temperature 101, 103
 Read 103
 Red/Bleu 101
 Color temperature Red/Bleu 102
 Read 102
 comb filter 261–263
 Read comb filter 262
 read minimum/max 263
 Write comb filter 261
 Comb filter 260
 increment/decrement 260
 Commands 11, 301
 additional commands 301
 basic commands 11
 Contrast 31–36, 302–303
 decrement 32, 303
 increment 31, 302
 read 34
 read Maximum 36
 read minimum 35
 write 33

D

Data input 230–232
 Data input format 231–232
 Data input format increment/decrement 230
 Device type 13
 Read device type 13
 Diagnosis 272–278
 dirty filters, read 276
 I²C diagnosis 272
 Lamp and power supply, read 274
 Lamp error, read 278
 parts erase history 275
 parts history, read 273
 power supply, read 277
 Digital zoom 161–172
 Decrement window size 170

Decrement window X position 171
 Decrement window Y position 172
 Increment window size 167
 Increment window X position 168
 Increment window Y position 169
 Read window size 164
 Read window X position 165
 Read window Y position 166
 write window size 161
 write window X position 162
 write window Y position 163
 Digital Zoom 157
 display 115–118
 blanking 115–118
 enable 117–118
 reset 116
 Display 119, 121, 123–126
 Blanking 119, 121, 123–126
 Maximum, read 126
 Minimum, read 125
 read 121

F

Filmmode detection 111–113
 increment/decrement 111
 Read Filmmode detection 113
 Write Filmmode detection 112
 filters, read 276
 Freeze 76–77
 Read Freeze 77
 write Freeze 76

G

Gamma 55–60
 decrement 56
 increment 55
 read 58
 read Maximum 60
 read minimum 59
 write 57

H

history 275
 erase 275
 history, read 273
 Horizontal sync polarity 265
 read minimum/max 265

I

Identification 12, 19
 identification commands 12
 Projector language 19
 Read Projector language 19
 Image files 93–95, 233–238, 240, 242–244
 Copy image file 235
 decrement 243
 delete image file(s) 234
 Increment 242
 Min/Max 244
 move image file 237
 Read 240
 read image file 95
 rename image file 236
 write 238
 write image file 94
 Image files list 96
 read image file list 96
 Input balance 208–212, 214–217
 black 209–212
 white 214–215
 White 216–217

iQ PC 285–299

- introduction 286
- Min/Max iQ PC Projector ON state, Read 297
- Min/Max iQ PC Projector standby state, Read 298
- Min/Max iQ PC state, Read 299
- Projector ON state, Increment/Decrement 294
- Projector ON state, Read 291
- Projector ON state, Write 287
- Projector Standby state, Increment/Decrement 295
- Projector Standby state, Write 288
- Projector Standby state, Read 292
- reboot 290
- state, Increment/Decrement 296
- state, Read 293
- state, Write 289

iQ PC Projector ON state, Increment/Decrement 294

iQ PC Projector ON state, Read 291

iQ PC Projector Standby state, Increment/Decrement 295

iQ PC Projector Standby state, Read 292

iQ PC Projector Standby state, Write 288

iQ PC reboot 290

iQ PC state, Increment/Decrement 296

iQ PC state, Read 293

iQ PC state, Write 289

K

Keystone 83–84

Read Keystone 84

write Keystone 83

L

Lamp 85–88, 90, 128–130

lamp commands 85, 128

lamp History read 130

lamp mode read 87

lamp mode write 86

lamp runtime reset, write 129

lamp Status read 88

lamp Warning read 90

Lamp error, read 278

Lamp history, read 274

Lamp runtime 91

Read Lamp runtime 91

Lamps Serial number 92

Read Lamps Serial number 92

lens 27–29

lens Focus 29

lens shift 27

lens Zoom 28

Lens commands 26

Logo 78, 281–284

Abort saving screenshot 283

load 284

logo ON/OFF 78

Save screenshot 282

Take screenshot 281

Logo status 280

Logo status, read 280

M

Menu 67

Exit 67

Min/Max iQ PC Projector ON state, Read 297

Min/Max iQ PC Projector standby state, Read 298

Min/Max iQ PC state, Read 299

Mode, Decrement 202

Mode, Increment 201

Mode, Read 200

Mode, read min/max 203

Mode, write 199

O

Orientation 72–73

Read orientation 73

Write orientation 72

P

Panel size 279

Panel size, read 279

Phase 61–66, 312–313

decrement 62, 313

increment 61, 312

read 64

read Maximum 66

read minimum 65

write 63

Picture in Picture 131

PiP 132–137, 139, 141, 143–145, 147–148, 150, 152–154, 156

PiP add window 150

PiP current Layout 139

PiP Layout List 137

PiP list active sources 154

PiP Loop Focus 132

PiP Priority read 153

PiP Priority Write 152

PiP Read Focus 133

PiP read last active window type 156

PiP remove window 148

PiP removeLayout 147

PiP rename Layout 145

PiP save Layout 143

PiP save Layout as 144

PiP select Layout 141

PiP Write Focus 134

PiP Write layout 136

read PiP Layout 135

power supply error, read 277

Power supply history, read 274

Projector address 18

write Projector address 18

Projector language 20

write Projector language 20

Projector ON/OFF 23

write Projector ON/OFF 23

Projector's runtime 17

Read Projector's runtime 17

Projector's Serial number 16

Read Projector's Serial number 16

Projector's Software type 14

Read Projector's Software type 14

Projector's Software version 15

Read Projector's Software version 15

Projector's Status 24

Read Projector's Status 24

R

RCU 22, 315–316

RCU commands 22, 315–316

overview 316

S

Saturation 43–48, 306–307

decrement 44, 307

increment 43, 306

read 46

read Maximum 48

read minimum 47

write 45

Serial comms 1–2, 4–6, 8, 10

Basics 1

commands 10

hardware 6

protocol 2, 4

- data words 4
- settings 5
- Syntax 8
- Sharpness 310–311
 - decrement 311
 - increment 310
- Shutter 74–75
 - Read Shutter 75
 - write Shutter 74
- Source 68
 - Source selection 68
- sources 70
 - read scanned inputs 70
- Sources 71
 - scan inputs 71
- Standby Timer 104–105
 - Read Standby Timer 105
 - write Standby Timer 104
- startup 205
 - Automatic startup 205
- Startup 204, 206–207
 - Automatic startup 204
 - Startup screen 206–207
- Switching mode 107
 - Write switching mode 107
- Switching Mode 109
 - Read Switching Mode 109
- sync 264, 266–268, 270–271
 - Read Horizontal sync polarity 266
 - Read Sync locking 270
 - sync locking, increment/decrement 268
 - sync polarity, increment/decrement 264
 - Write Horizontal sync polarity 267
 - Write Sync locking 271
- Sync 269
 - Sync locking, read minimum/max 269

T

- Tint 49–54, 308–309

- decrement 50, 309
- increment 49, 308
- read 52
- read Maximum 54
- read minimum 53
- write 51
- Treble, Decrement 192
- Treble, Increment 191
- Treble, Read 190
- Treble, read min/max 193
- Treble, write 189

V

- VCO 246–251
 - decrement 247
 - increment 246
 - read 249
 - read Maximum 251
 - read minimum 250
 - write 248
- Volume, Decrement 183
- Volume, Increment 182
- Volume, read 180
- Volume, read min/max 181
- Volume, write 179

W

- Window size 158
 - read minimum/max 158
- Window X position 159
 - read minimum/max 159
- Window Y position 160
 - read minimum/max 160

Revision Sheet

To:

► **Barco nv Intelligent Displays**
Noordlaan 5, 8520 Kuurne
Phone: +32 56.36.82.11, Fax: +32 56.35.86.51
E-mail: presentations.bid@barco.com, Web: www.barcocom

From: _____

Date: _____

Please correct the following points in this documentation (**R5976449/04**):

page	wrong	correct