

FUNFLIX

QUICK START GUIDE

MULTIMEDIA PROJECTOR



G1



Dear Customer,

If you encounter any problems using the projector, please feel free to contact us at any time. (It is best to attach pictures or videos so that we can better assist you.)

 
After sales email: support@ifunflix.com

Wishing you a wonderful day!

FunFlix Customer Service Team

Remote Control

EN

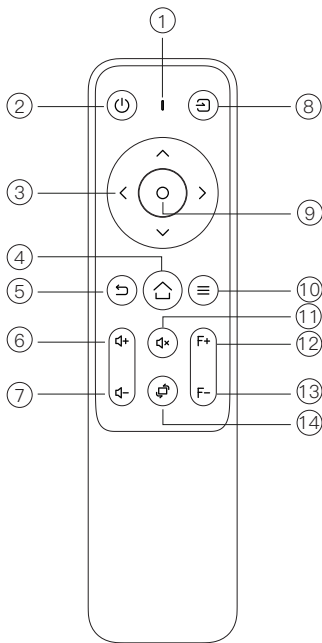

1. Signal Indicator
2. Power Key
3. Arrow keys
4. Home Key
5. Return key
6. Volume+
7. Volume-
8. Source key
9. Confirmation key
10. Menu
11. Mute Key
12. Focus+
13. Focus-
14. Screen Flip

Turn the Projector Operation On/Off

When the projector is connected to a power source, the projector enters standby and the cover signal indicator is red.

Operation on: Press the power key on the body or the power key on the remote control, the indicator will turn blue and enter the working state.

Operation off: In the working state, press the power key of the body or the power key on the remote control, the indicator changes from blue to red, and the projector is turned off.

Use of the Projector


Image focusing

When the newly installed projector is used for the first time, the image will be blurred, and it is necessary to focus the picture ;


Manual Focus

When the picture is blurred, press the focus keys "F+" and "F-" on the remote control to adjust the focal length of the lens. Tap or long press the focus button until the picture is clear. (As shown below)

Or press the menu button on the remote control; select "Settings" → Keystone → Projection Settings → Motor Focusing.

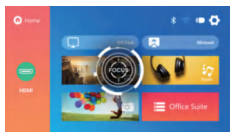

(Before the focus)

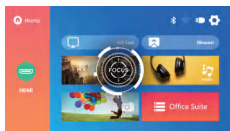

(After the focus)



Use of the Projector


EN

How to Use Projection Settings

Select the settings icon in the upper right corner of the main interface, and then press the "OK" key on the remote control to enter the settings interface and select "Projection Image Setting".



After entering the interface, select the mode you want in the projection settings.

 Projection mode: Front-Desktop / Rear-Desktop / Front-Ceiling / Rear-Ceiling

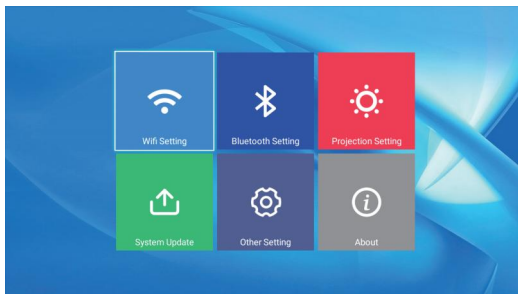

Use of the Projector

  Manual Keystone (Manually adjust the four corners through the arrow keys until the screen can be corrected)

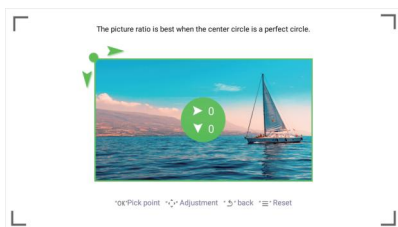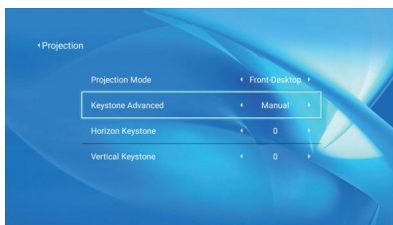


Motor Focusing (This function is turned on by default, and the screen can be kept square even after the device is displaced.)



Use of the Projector

Digital Zoom (Zoom out or enlarge the image)

 
EN

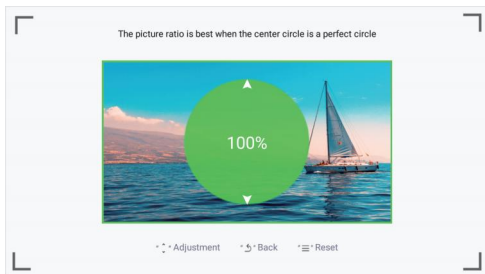

Use of the Projector

How to Select the Source

 
Select the source channel you want to enter in the list on the left side of the main interface, such as HDMI 1 / HDMI 2 / AV, then press the "OK" key on the remote control to enter the corresponding source interface.

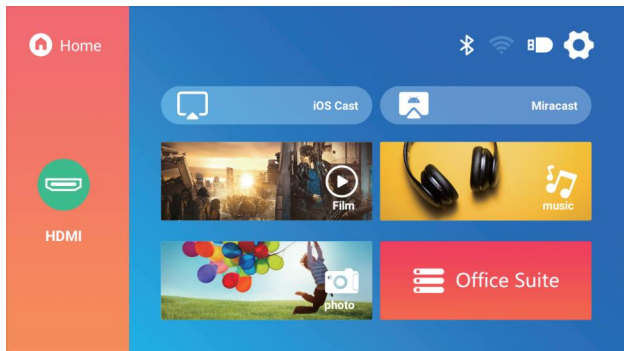

How to Connect to WiFi


Select the settings icon in the upper right corner of the main interface, press the "OK" key on the remote control to enter the settings interface, and select "WiFi Setting".

 After entering the interface, select the WiFi you want to connect to in the list below, then enter the password and complete the connection. Connected will be displayed behind the successfully connected WiFi.

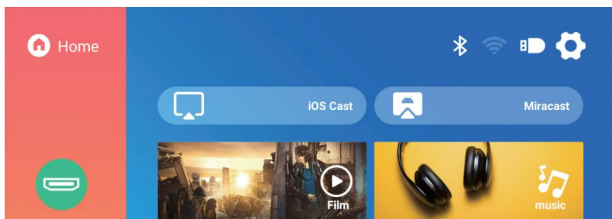

Use of the Projector

 EN


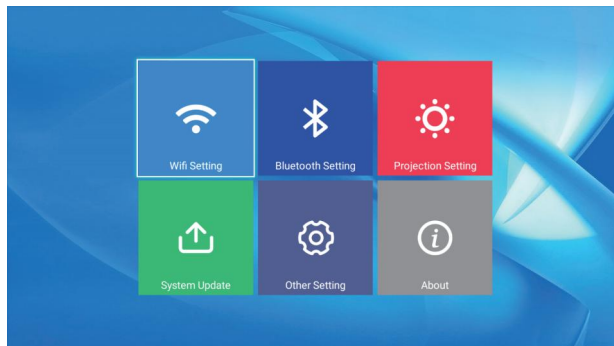


Use of the Projector

How to Connect Bluetooth

Select the setting icon in the upper right corner of the main interface, press the "OK" key on the remote control to enter the setting interface, and then select "Bluetooth Setting".

  After entering the interface, turn on Bluetooth, search for Bluetooth, and pair Bluetooth.

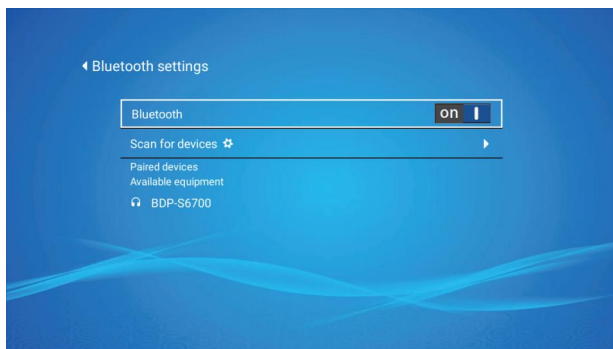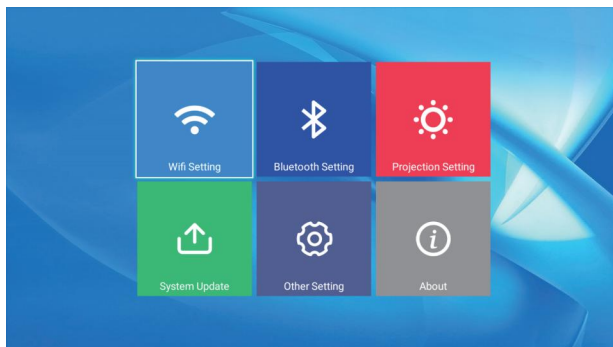

Q&A Normal Questions

1.What if the projector works but there is no sound?

G1 mini projector does not support Dolby, please Turn off the Dolby sound function.(Settings > Display & Sounds > Audio > Dolby Digital Output > and then turn Dolby Digital (OFF).

2.How do I watch Netflix movies or shows on the FunFlix MINI Projector?

Due to copyright compatibility issues, Netflix and Disney+ videos are not supported on the same screen on your phone, we recommend using a fire stick or Google Chromecast TV stick, which can watch apps such as Netflix and Amazon Prime Video.

3.Why can't Bluetooth connect to my phone?

Bluetooth can be connected to Bluetooth speakers, Bluetooth headphones, etc. to play audio. Cannot connect to a cell phone to play video. If you can't connect please check if your Bluetooth is connected to another device.

4. When first use, Electric focus not working?

1. Place projector on level surface that is perpendicular to the wall.
2. Open "Projection" menu and Click "F" button.
3. More details please refer to QA video.

5. Does the remote control come with batteries?

Compliance does not come with batteries, you will need to purchase 2 batteries yourself.

6. What should I do if my phone's sync playback doesn't work?

1. First, check if your cell phone and projector are trying the same WIFI.
2. Check whether the WIFI password is correct and connected or not
3. Check if your WIFI signal strength is weak.

7. What are the installation options?

It can be placed on a table, stand, wall and many other ways.

8.Will there be any noise when the projector is working?

When the projector is working, it requires a cooling fan to work, which can cause noise, which is unavoidable for every projector. But the sound is very low and will not affect your viewing effect.

9.Will the temperature be very high when the projector is working?

No, the projector is equipped with a brand new upgraded fan cooling system. But do not block the heat dissipation vent and cover it with a dust-proof cloth.

10.How to solve the problem of unclear images played in strong lighting environments?

It is recommended to play in a relatively dark environment for better results, which can be combined with the screen to present a clearer picture.

11. Do I need batteries if I use it outdoors?

Required, the projector itself does not have a battery. Bluetooth and wireless connections require a strong battery.

12. How to operate if there are unclear spots in the projection?

We use high-end enclosed light machine technology. If spots appear, we need to check whether there is dust on the outside of the lens after opening the lens cover, and clean and wipe it.

13. Why does the fan sometimes make noise?

This is an occasional condition of the machine and the noise is automatically eliminated by simply restarting the machine.