QUICK START

LP740B

It's easy to connect your computer or video player to the LP 745 and start presenting.

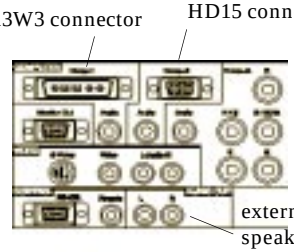

1. Plug the computer cable into the video connector on your computer and into the appropriate computer connector on the projector. If you want sound with your presentation, connect the audio cable.

NOTE: To connect certain workstation or Macintosh computers, you must also connect an adaptor between the computer cable and the computer. See the user's guide for details.

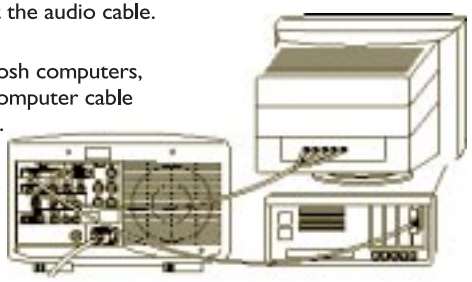

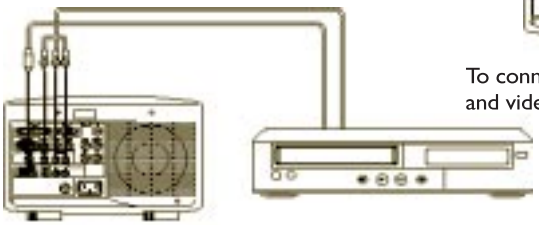

To connect a video player, use the supplied audio and video cables as shown.

2. Plug the power cord into the projector and into an electrical outlet.

3. Turn on the projector, then your computer or video player. If you are using a laptop, be sure the external video out is activated.

4. Position the projector the desired distance from the screen to get the desired image size.

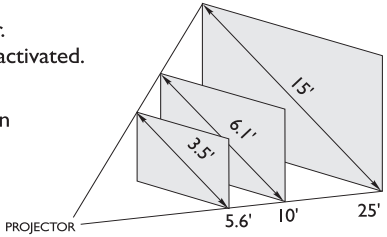

5. Adjust the height or focus of the image. Refer to the *LP740B User's Guide* for more information.

6. If necessary, access the menus by pressing the menu button on the keypad or remote and using the arrow buttons to further adjust the image.

InFocus®

009-0391-00 (English)

QUICK START

LP740B

SAFETY SUMMARY: Please read and follow all safety instructions provided in this quick start and your User's Guide BEFORE using your new projector. Failure to comply with safety instructions may result in fire, electrical shock, or personal injury and may damage or impair protection provided by equipment. Please save all safety instructions..

Safety Definitions:

- **Warning:** Statements identify conditions or practices that could result in permanent personal injury.
- **Caution:** Statements identify conditions or practices that could result in damage to your equipment.

Safety Terms:

- **Warning:** Don't look directly into the lens when the projector is turned on.
- **Warning:** Don't block ventilation openings.
- **Warning:** To replace the lamp, turn the power off and unplug the power cord. To avoid burns, wait 30 minutes before opening the lamp door. Follow all instructions provided in the User's Guide.
- **Warning:** Please use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal.
- **Warning:** Refer all service to qualified service personnel. Servicing your own projector will void the warranty. See below for the customer service contact information.
- **Caution:** Don't set liquids on the projector. Spilled liquids may damage your projector.
- **Caution:** Don't place the projector on a hot surface or in direct sunlight.
- **Caution:** Do not drop the projector. Transport the projector in an In Focus-approved case; see the Appendix of the User's Guide for a list of cases.
- **Caution:** For ceiling mount installations, please use the ceiling mount recommended in the User's Guide and follow all instructions provided with it.

Safety Symbols:

Attention: For information about usage of a feature, please refer to the User's Guide.

Warning: Hot surface. Do not touch.

An arrow pointing to the lamp door of the projector.

Customer Service

If you need assistance, call In Focus Customer Service directly at **1-800-799-9911**. Support is free between 5 a.m. and 5 p.m. PST, Monday through Friday. Support is available in North America after hours and weekends for a fee at **1-888-592-6800.**

Or, send us an e-mail at techsupport@infocus.com

In Europe, call In Focus in The Netherlands at **(31) 35-6474010**.

In Singapore, call **(65) 332-0659**.

InFocus®